


Repair Parts Sheet	Revision	Revision Date	Product Code Beginning
L4763	A	06/2023	B

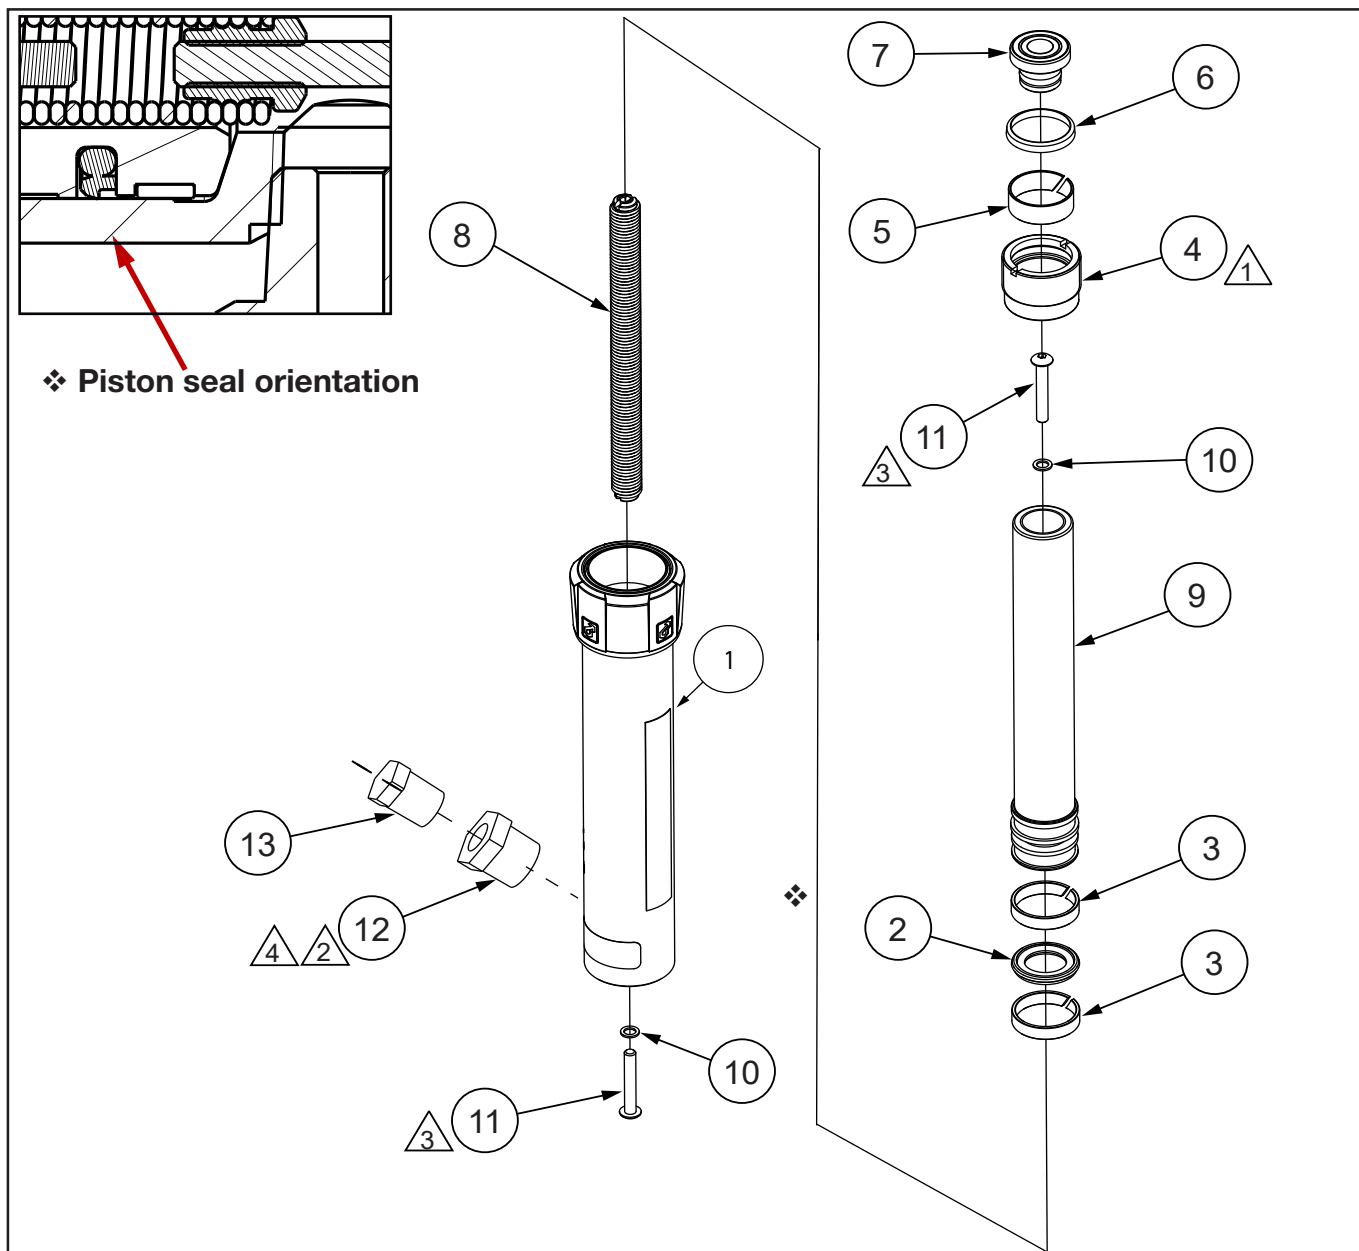

(△) Notes	
Item	Torque / notes
1	Secure with threadlocker and torque to 70-90 in-lbs [7.9-10.2 Nm]
2	Torque to 40-60 ft-lbs [54-81 Nm]
3	Torque to 40-50 in-lbs [3.5-5.5 Nm]
4	Apply Loctite 545 or teflon tape

**Note: See Page 2
for parts list.**

Repair Parts List, Figure 1

Item	Description	Qty.	Part Number		
			BRW51	BRW53	BRW55
1	Base	1	N/A		
2	Piston seal	1	▲●		
3	Wear band, plunger	2*	▲★		
4	Stop ring	1	RC5044		
5	Wear band, stop ring	1	▲*		
6	Wiper	1	▲✱		
7	Saddle assembly	1	DC4812900		
8	Spring assembly	1	RC5K31	RC5K32	RC5K33
9	Plunger	1	BRW51040	BRW53040	BRW55040
10	Copper gasket	2	▲■		
11	Screw, #10-32 UNF x 1.25	2	▲■		
12	Reducer bushing	1	CJ657032		
13	Pipe plug	1	A8069006		
N/S	O-ring, coupler	1	▲		
N/S	Enerpac decal	1	▲		
N/S	Warning decal	1	▲		
N/S	O-ring, saddle	1	▲		
N/S	Thread protector	1	▲		

Notes:

* BRW51 only 1 plunger wear band

▲ Indicated item included in and available as a part of the Repair Kit RC5NK0

■ Indicated item included in and available as a part of the Spring Assembly

● Indicated item included in and available as packs of 10 units in Seal Kit RC5NKS (see below)

★ Indicated item included in and available as packs of 10 units in Wear Band Kit Plunger RC5NKB1 (see below)

* Indicated item included in and available as packs of 10 units in Wear Band Kit Stop Ring RC5NKB2 (see below)

✱ Indicated item included in and available as packs of 10 units in Wiper Kit RC5NKB1 (see below)

●★✱✱ Kits only available in America



www.enerpac.com