


Repair Parts Sheet	Revision	Revision Date	Product Code Beginning
L1594	G	10/23	O

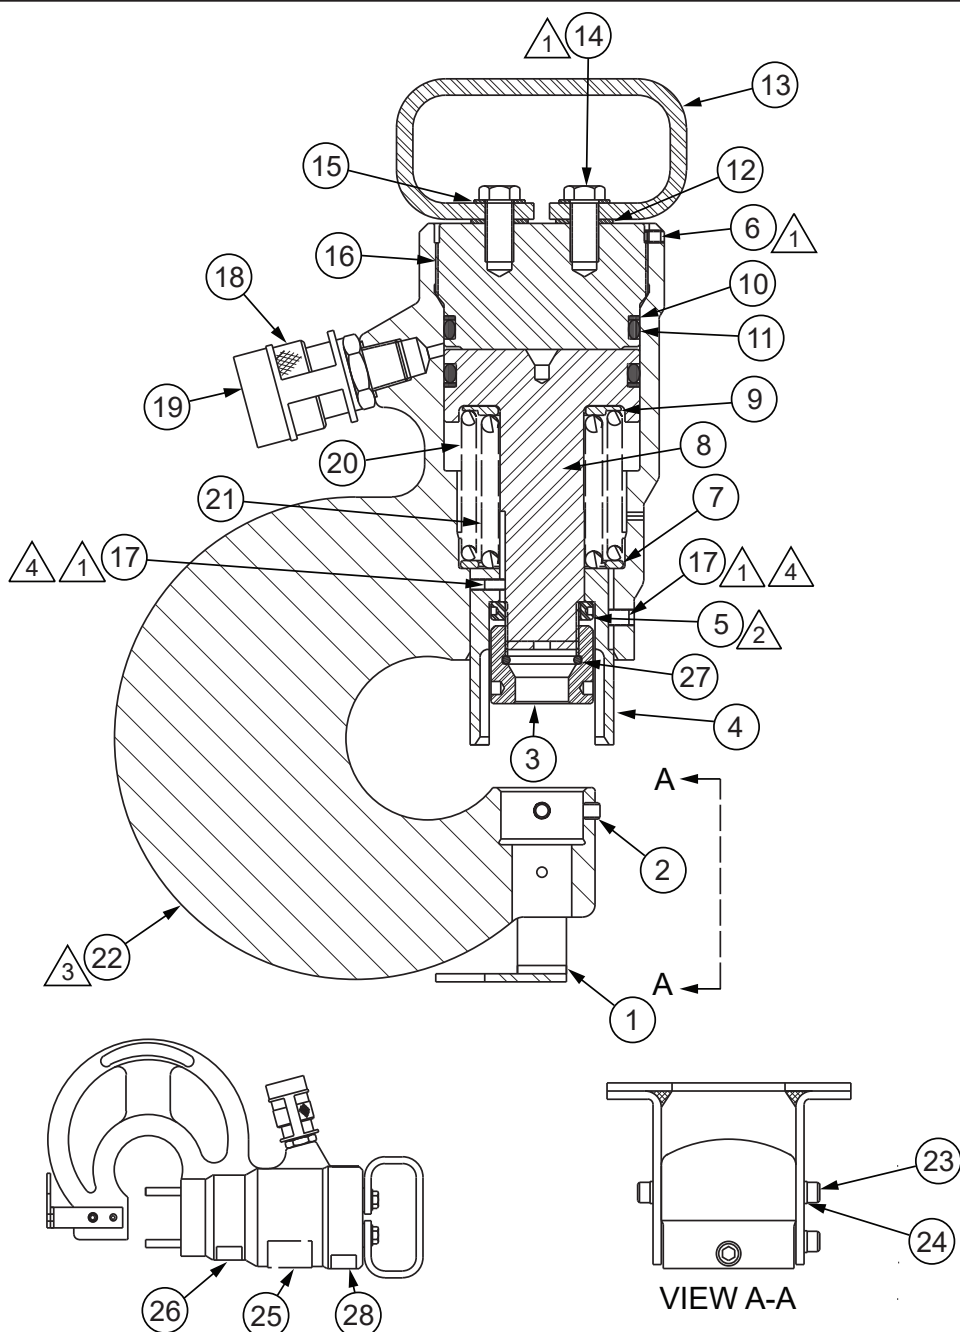

**Note: See Page 2
for parts list.**

Item	Torque / notes
1	Apply Loctite 242
2	Apply Loctite 271 on threads to prevent backing out during use
3	Lubricate bore with grease prior to assembly
4	Seat lightly and then back off slightly to prevent binding

Repair Parts List, Figure 1

L1594

Item	Description	Qty.	Part Number
1	Bracket Weldment	1	DA3147900
2	Set Screw	1	■
3	Coupling Nut	1	DA3141234
4	Guard	1	DA3140689
5	Lock Ring	1	DA3142749
6	Set Screw	1	■
7	Washer	1	DA3139108
8	Plunger	1	DA3137040
9	Washer	1	DA3138108
10	Back-up Washer	2	■
11	O-Ring	2	■
12	Washer	2	B1027108
13	Handle	1	DA3135070
14	Hex Head Cap Screw	2	B1073046
15	Lock Washer	2	B1003066
16	End Cap	1	DA3136020
17	Set Screw	2	■
18	Coupler	1	CR400
19	Dust Cap	1	CD411
20	Comp. Spring	1	DA3145110
21	Comp. Spring	1	DA3146110
22	Base	1	◆
23	Socket Head Screw	3	B1341028
24	Lock Washer	3	B1030066
25	Name Plate Decal	1	■
26	Warning Decal	2	■
27	O-Ring	1	■
28	CE Decal	1	DA12044026
■ Item included in and available only as part of Repair Kit SP-35K ◆ Item not available as service part			



To maintain your warranty,
 have your products inspected and repaired
 by an authorised Enerpac Service Centre
www.enerpac.com