


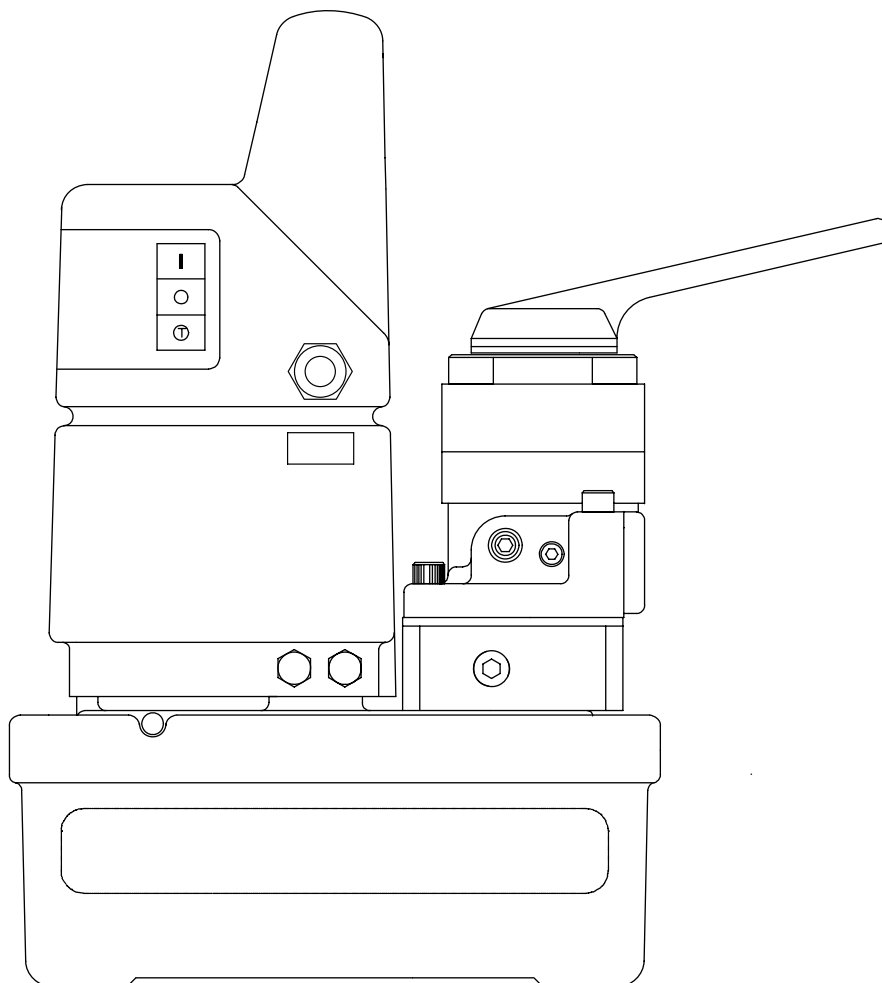

Contents:

Figure 1 - Pump Side View	2	Figure 9 - Shroud Wiring - Front of Motor	5
Figure 2 - Pump Front View (shroud removed)	2	Figure 10 - Shroud Wiring - Left of Motor	5
Figure 3 - Valve Assembly, VM4	2	Figure 11 - Shroud Wiring - Right of Motor	5
Figure 4 - Pump Bottom View	2	Figure 12 - Top View, Cord and Cables	6
Figure 5 - Pump Front View (assembled)	3	Figure 13A - Remote Pendant Assembly (early style)	7
Figure 6 - Adapter Block Details	3	Figure 13B - Remote Pendant Assembly (late style)	7
Figure 7 - Pump Top View	4	Figure 14 - Electrical Schematic, 110V Models	8
Figure 8 - Shroud Wiring - Behind Motor	5	Figure 15 - Electrical Schematic, 220V Models	8

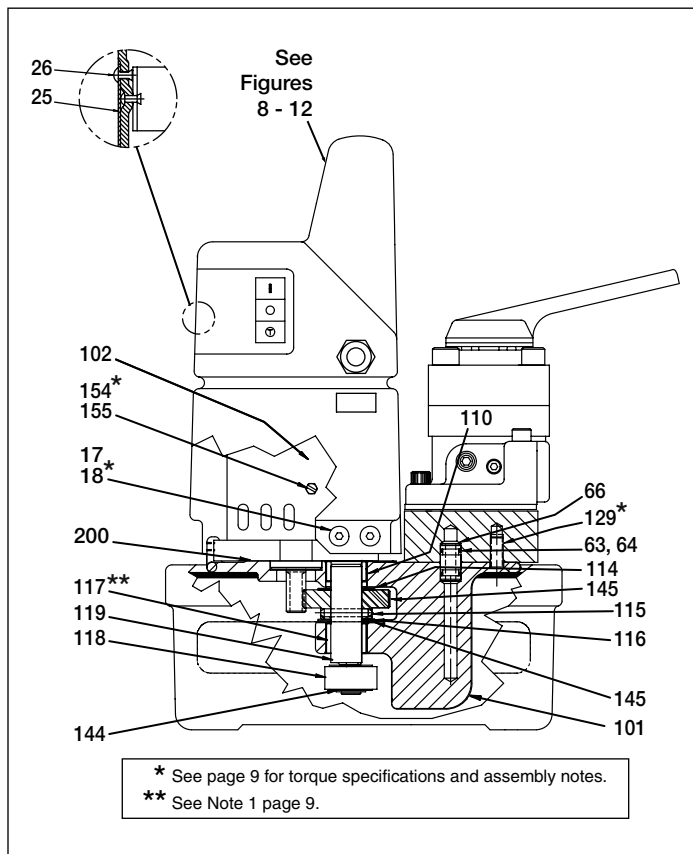


Figure 1, Pump Side View

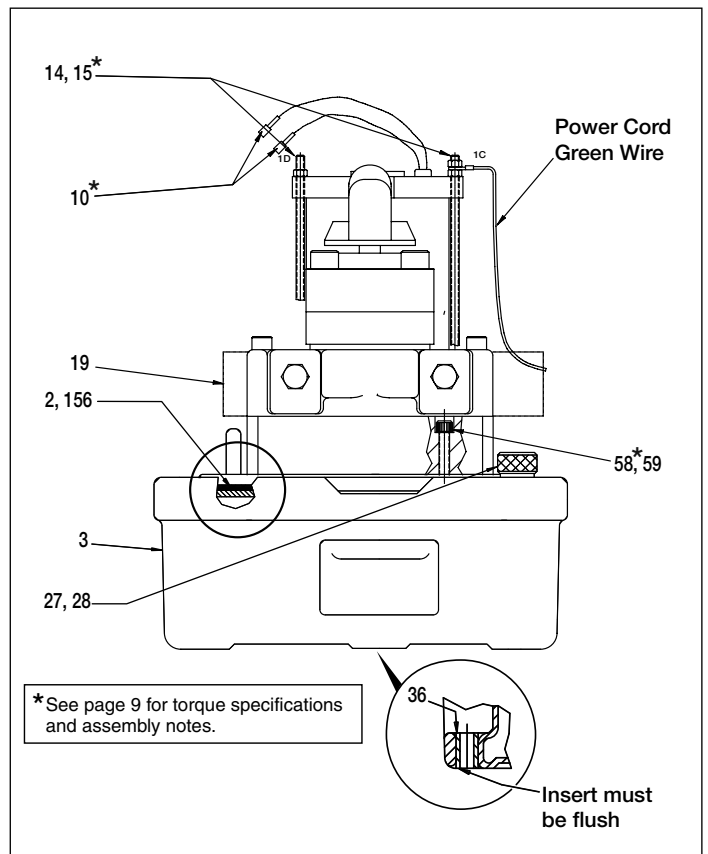


Figure 2, Pump Front View (shroud removed)

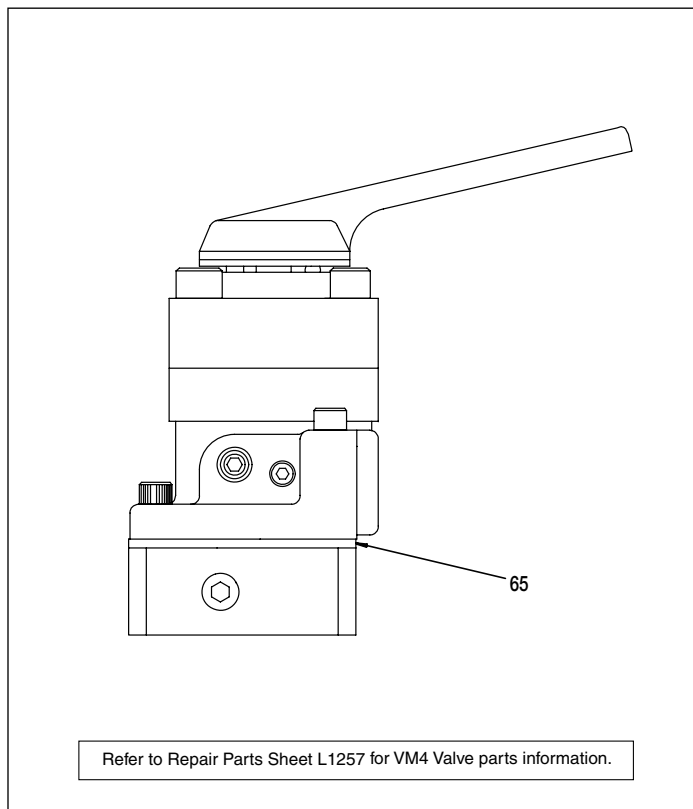


Figure 3, Valve Assembly, VM4

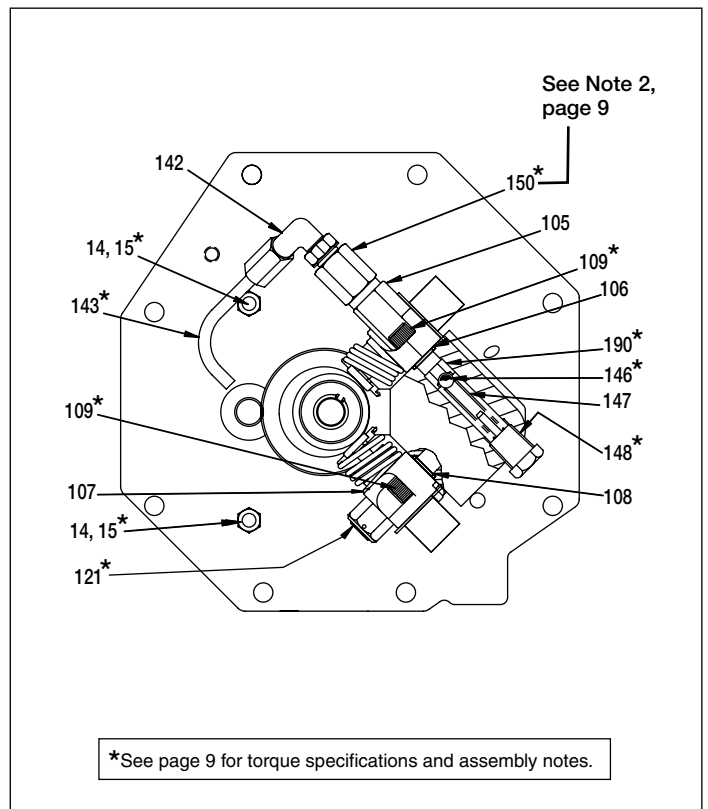


Figure 4, Pump Bottom View

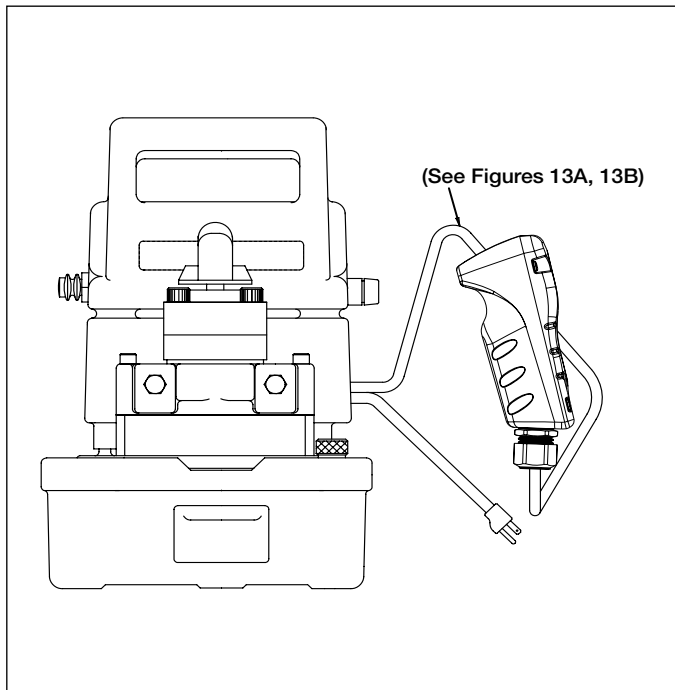


Figure 5, Pump Front View (assembled)

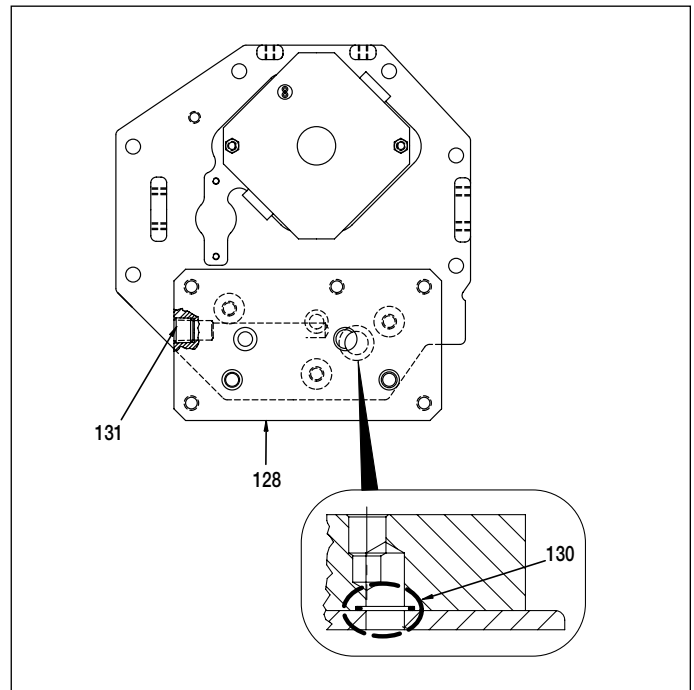


Figure 6, Adaptor Block Details

Repair Parts List for Figures 1 through 6

Item	Part Number	Qty.	Description
2	★DA12088167SR	1	Gasket (Includes item 156)
3	DA1910900SR	1	Reservoir Assembly. 0.5 Gal.
	DA4780900SR	1	Reservoir Assembly. 1.0 Gal.
10	DA3776006	2	Pin
14	DA15066	3	Lock Washer
15	B1018121	3	Hex Nut
17	CW261225	6	Eyelet
18	F866028	6	Machine Screw
19	CW259298	1	Baffle
25	Contact Enerpac	1	Nameplate
26	DC818003	4	Pop Rivet
27	DA608024	1	Vent Plug
28	★B1906503	1	O-Ring
36	DA931225	2	Insert
58	B1019028	2	Screw
59	★S3037	2	Gasket
63	★B1007503	5	O-Ring
64	★B1012564	4	Ring, Back-up
65	★F786167	1	Gasket
66	C162096	1	Connector
101	DA12487840SR	1	Pump Manifold (includes # 121)
102	CW179259	1	115 VAC Motor
	DC1415259	1	220 VAC Motor (50 Hz)
105	CW298950SR	1	.53 Piston Block Assembly
106	★B1007503	1	O-Ring
107	CW299950SR	1	.24 Piston Block Assembly
108	★B1012803	1	O-Ring
109	B1010028X	4	Screw
110	CW252107	1	Bearing

Item	Part Number	Qty.	Description
114	CW301228	1	Driven Gear
115	★B1097057	1	Spring Pin
116	★CW199107	1	Bearing
117	CW251107	1	Bearing
118	CW302107	1	Bearing
119	CW303104	1	Shaft
121	DA5999900SR	1	Relief Valve (see Figure 4)
128	CW522038	1	Adaptor Block
129	DA3012023	3	Screw
130	★B1206517	1	Square Ring
131	DC6794245	1	Plug
142	DA1011096	1	Elbow
143	DA261268	1	Tube
144	★CW467044	1	Retaining Ring
145	★DA445107	2	Bearing
146	★B1007016	1	Ball
147	★DA1564110	1	Spring
148	DC433950	1	Plug Assembly
150	DA610900SR	1	Relief Valve Assembly
154	★CU876028	3	Screw (10-24)
155	DA3585186	3	Spacer
156	See item 2	1	Gasket
190	DA12352290	1	Ball Seat
200	★DC1947167	1	Gasket

Replacement Brushes for Electric Motor

---	DA9655380	1	Brush Set for 115V Models
---	DA9656380	1	Brush Set for 220V Models

★ Included in Repair Kit PUJ1400BK

*See page 9 for torque specifications and assembly notes.

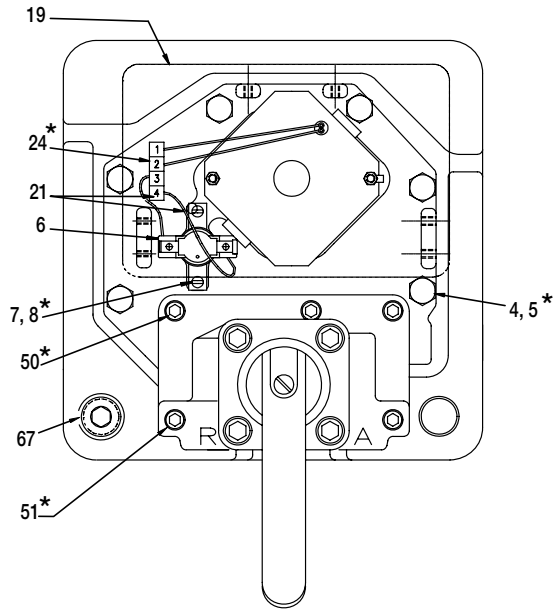


Figure 7, Pump Top View

Repair Parts List for Figure 7

Item	Part Number	Qty.	Description
4	DA6954167	8	Gasket
5	DC2038028	8	Screw
6	E1100004	1	Thermostat (115V)
	DC8401372	1	Thermostat (220V)
7	C701222	2	Washer
8	M642028	2	Screw
19	CW259298	1	Baffle
21	DC7969960	2	Wire Assembly
24	DA11540380	1	Pin Housing
50	B1349028	3	Screw
51	B1357028	2	Screw
67	A1009245	1	Plug

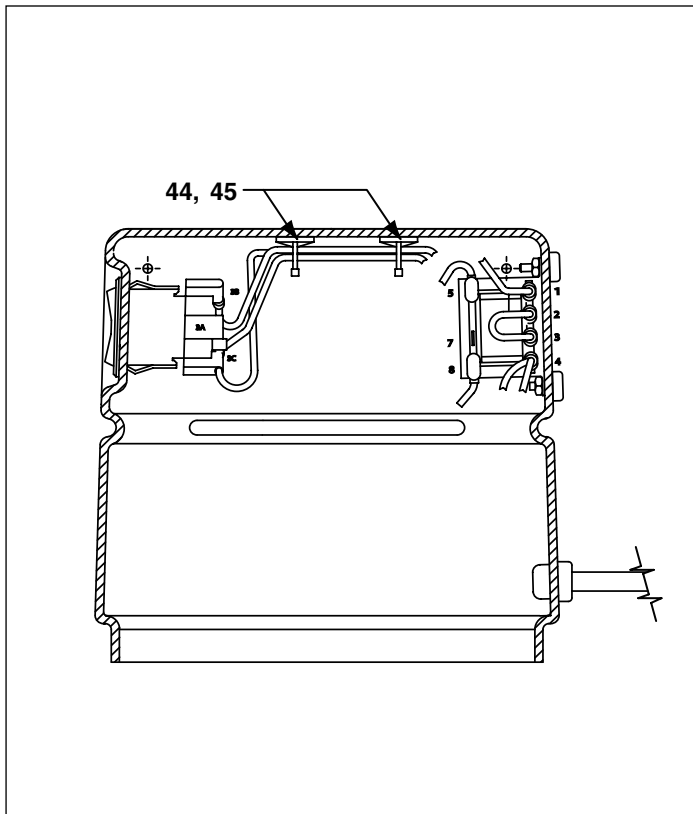


Figure 8, Shroud Wiring - Behind Motor

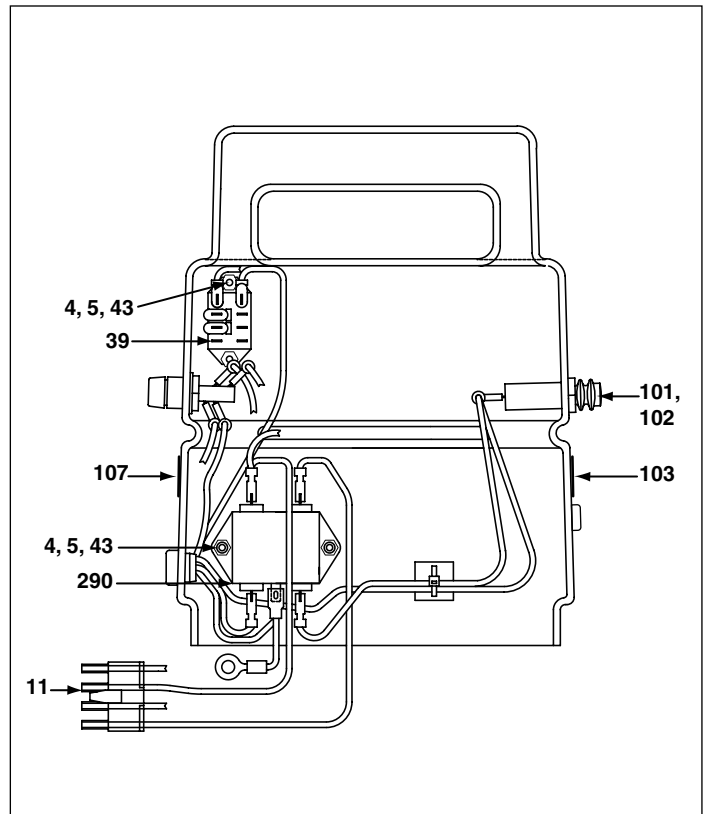


Figure 9, Shroud Wiring - Front of Motor

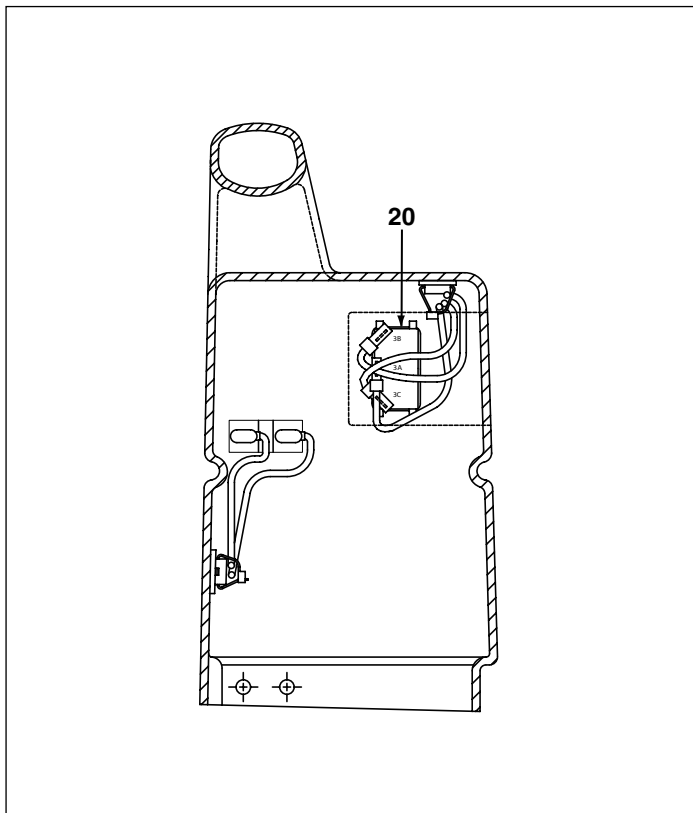


Figure 10, Shroud Wiring - Left of Motor

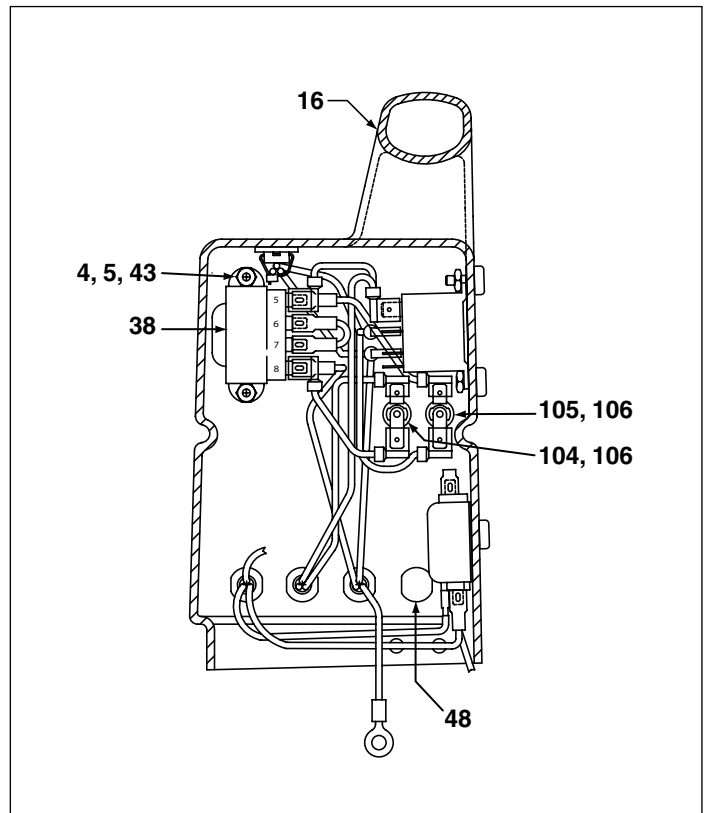


Figure 11, Shroud Wiring - Right of Motor

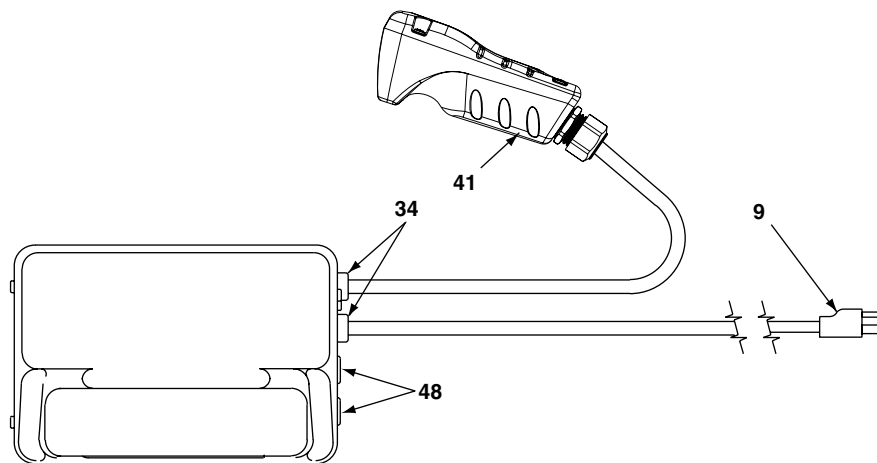


Figure 12, Top View, Cord and Cables

Repair Parts List for Figures 8 through 12

Item	Part Number	Qty.	Description	Item	Part Number	Qty.	Description
4	BC1310728	4	Screw (115V)	43	DA5974098	4	Screw Cover (115V)
	BC1310728	6	Screw (220V)		DA5974098	6	Screw Cover (220V)
5	F75021	4	Lock Nut #6-32 (115V)	44	EHC3901075	3	Tie Down, Self Adhesive
	F75021	6	Lock Nut #6-32 (220V)	45	DA3131217	4	Cable Tie
9	DC7954960SR	1	Power Cord (115V)	48	DA3731009	2	Hole Plug
	DC10008960SR	1	Power Cord (220V)	101	DC8366380	1	Circuit Breaker (115V)
11	DA11539380	1	Receptacle		DC8367380	1	Circuit Breaker (220V)
16	DC10037098	1	Shroud (115V)	102	DC8200380	1	Circuit Breaker Reset Cap
	DC10036098	1	Shroud (220V)	103	DC8237023	1	Circuit Breaker Decal
20	E1500002	1	Switch	104	DC8371378	1	Secondary Fuse, 300mA
34	CR759291	2	Cord Bushing	105	DC8370378	1	Primary Fuse, 62mA (115V)
38	DA5875380	1	Transformer		DC8400378	1	Primary Fuse, 40mA (220V)
39	E1300008	1	Relay, D1 (115V)	106	DC8372378	2	Fuse Holder
	DC8280980	1	Relay, D1 (220V)	107	DC7891026	1	Fuse Decal
41	(See Fig. 13A & 13B)	1	Pendant Assy	290	DC8365380	1	EMI Filter (220V only)

Note: For replacement shroud assembly:

- 115V Models: Order Repair Kit DC7933900SR.
- 220V Models: Order Repair Kit DC7934900SR.

Repair Parts List for Figure 13A
(Used on pumps manufactured July 2008 and earlier.)

Item	Part Number	Qty.	Description
1	CU598190	1	Pendant Body
2	CU911372	1	Switch
3	DA1568007	1	Strain Relief
4	DC10003960	1	Cord Assembly

Note: If replacing the entire pendant and cord, order the *late style* pendant and cord assembly, part number DD1048900SR. Refer to Figure 13B.

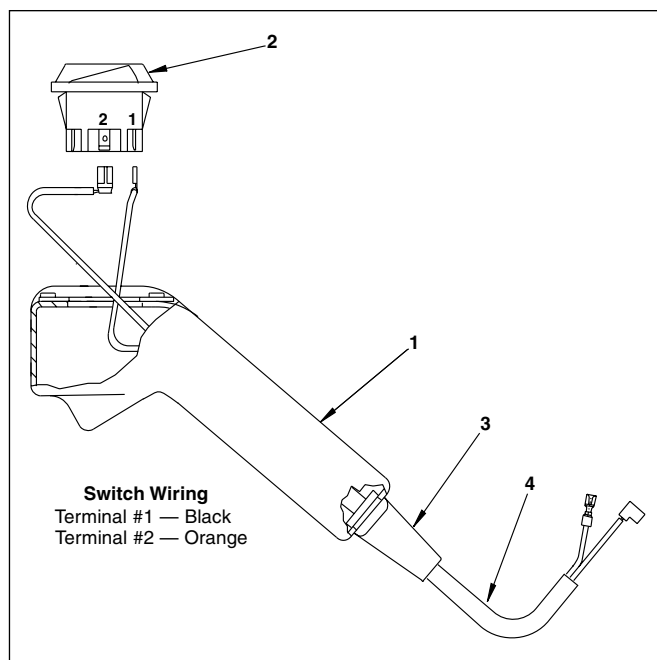


Figure 13A, Remote Pendant Assembly (early style)

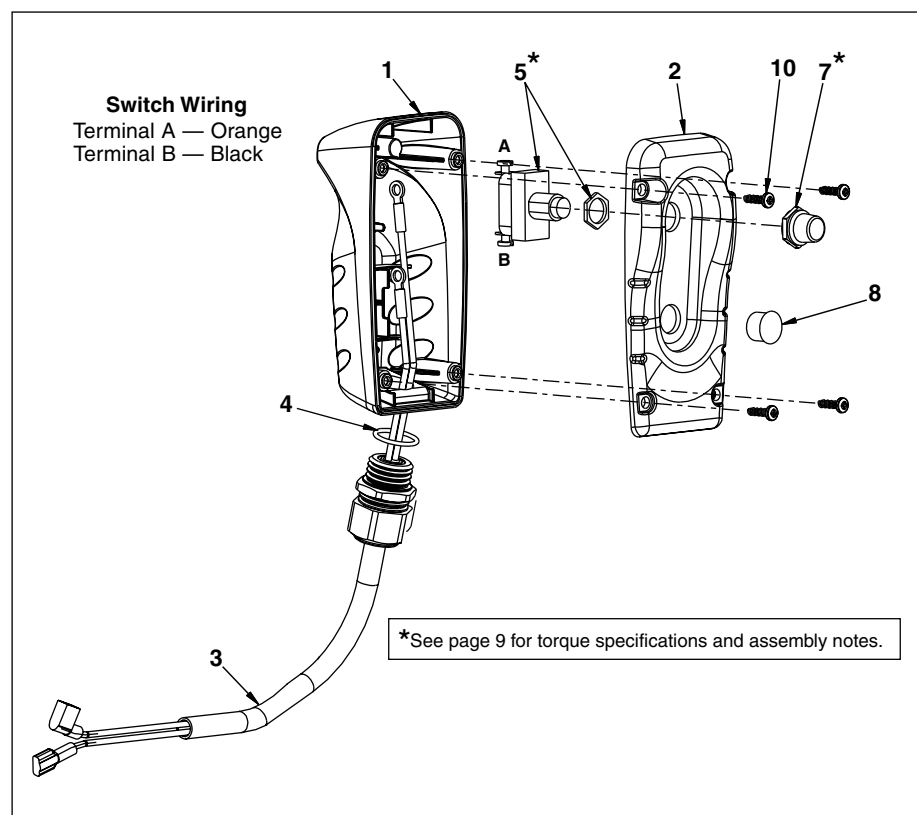


Figure 13B, Remote Pendant Assembly (late style)

Repair Parts List for Figure 13B (Used on pumps manufactured August 2008 and later.)

Item	Part Number	Qty.	Description	Item	Part Number	Qty.	Description
1	DC9425424	1	Pendant Housing, Lower	5	DC8282379	1	Switch, Push Button, Blk, NO
2	DC8122424	1	Pendant Housing, Upper	7	DC8284379	1	Boot, Push Button, Black
3	DD1053960	1	Cord Assembly, 20 Ft.	8	DC8228009	1	Dome Plug
4	B1223503	4	O-Ring	10	DC9428008	4	Screw, Hi-Lo #8-1/2

Note: For complete pendant and cord assembly (items 1 through 10, above), order part number DD1048900SR.

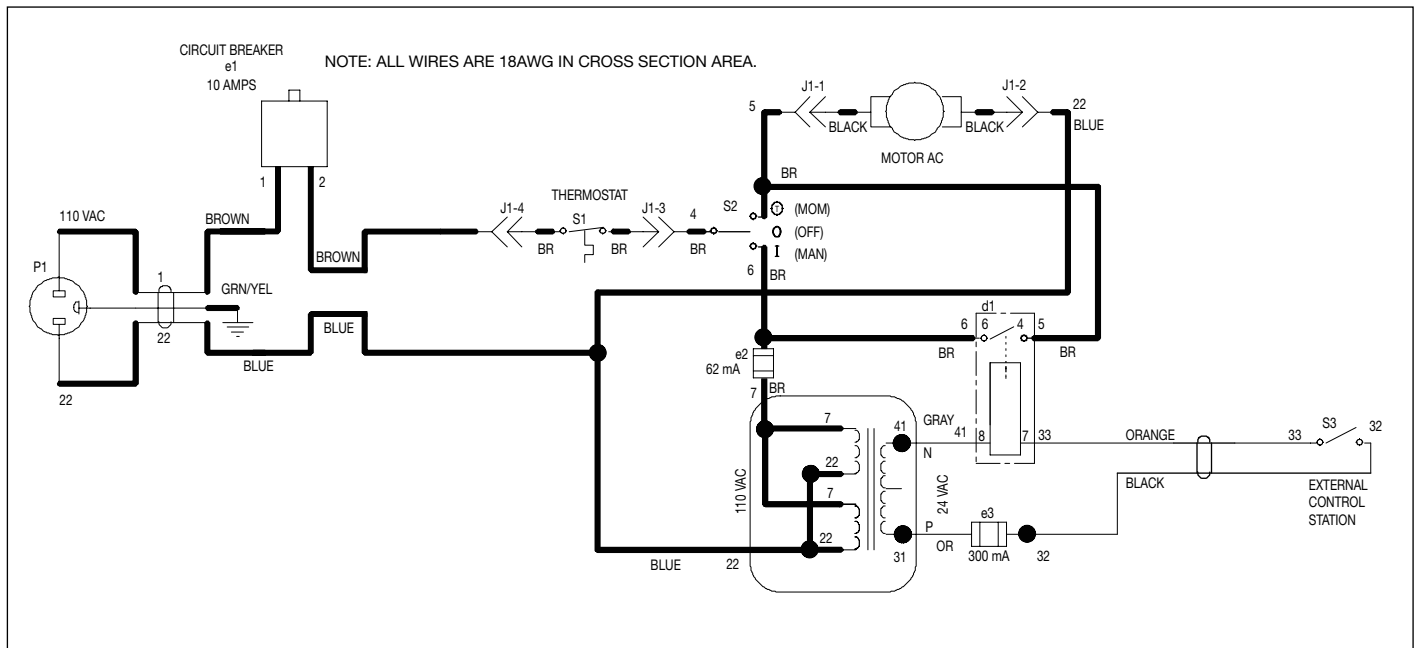


Figure 14, Electrical Schematic, 110V Models

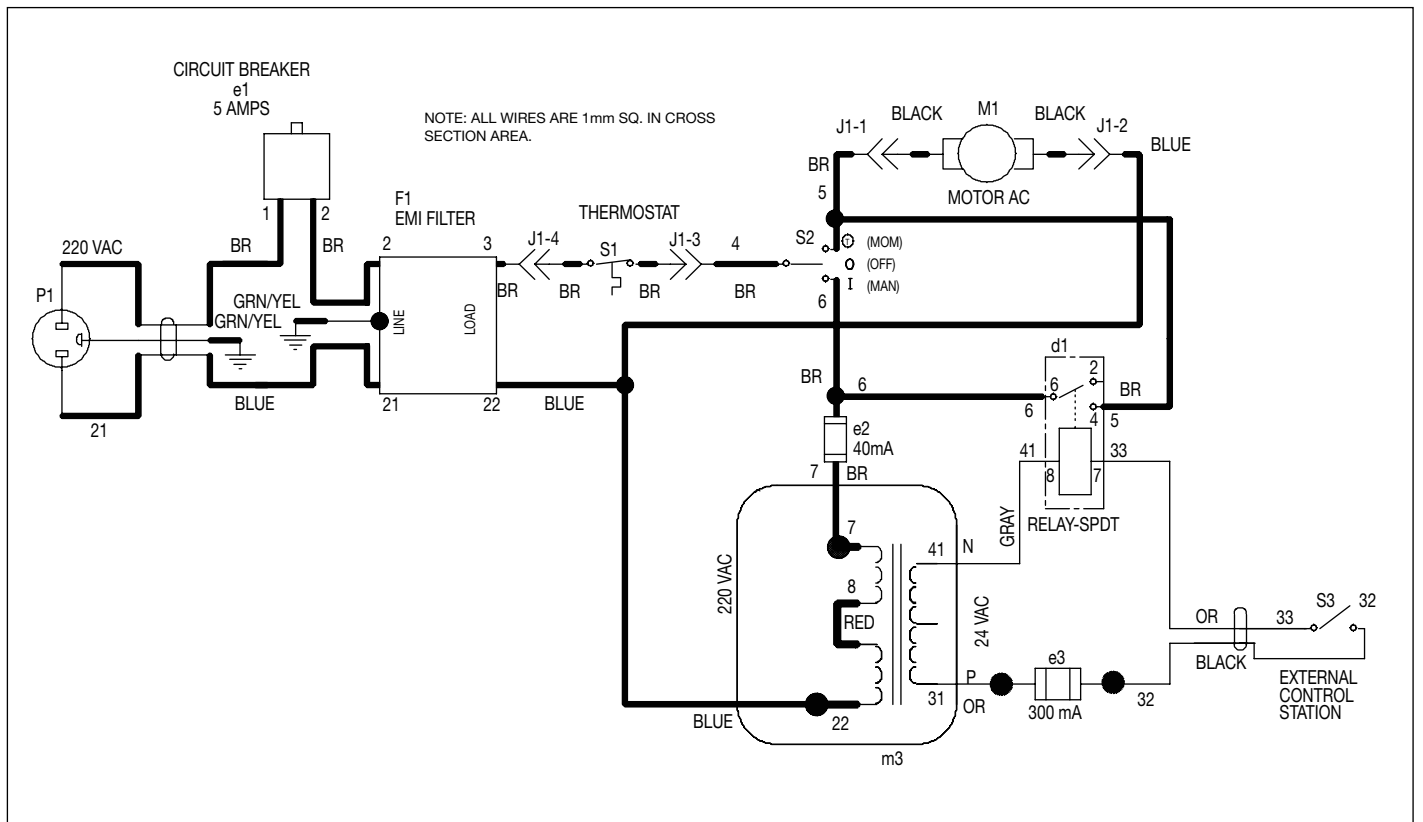


Figure 15, Electrical Schematic, 220V Models

Figure	Item No.	Torque Specification and/or Assembly Notes
1	18	Apply 1 drop Loctite #242 to threads. Torque to 12-18 in-lbs (1,4-2,0 Nm).
1	154	Torque to 27-31 in-lbs (3,1-3,5 Nm).
1	129	Torque to 19-21 ft-lbs (2,7-2,9 m/kg).
1	Note 1	Install bearing, Item 117, flush to 0.010" (2,54 mm) recessed from surface.
2	10	Trim wire length to 9 to 10 inches (228-254 mm) before attaching pins (item 10). Then insert into item 24.
2	15	Torque to 27-31 in-lbs, (3,1-3,5 Nm).
2	58	Torque to 35-42 in-lbs (41,5-48,4 cm/kg).
4	15	Torque to 27-31 in-lbs (3,1-3,5 Nm).
4	109	Torque to 14-16 ft-lbs, dry (19,0-21,7 Nm).
4	121	Torque to 16-19 ft-lbs, dry (21,7-25,8 Nm).
4	143	Align tube to face mesh and splash lubricate upper needle bearing.
4	146	Seat must be coined prior to assembly.
4	148	Assemble with Loctite #545.
4	150	Relief valve setting should be from 250 to 400 psi (17,3 to 27,9 bar).
4	190	Assemble with Loctite #609.
4	Note 2	Stake threads after setting pressure.
7	5	Torque to 47-53 in-lbs (5,3-6,0 Nm). Use Loctite #242 on item #5.
7	8	Torque to 9-12 in-lbs (1,0-1,3 Nm).
7	24	Attach to receptacle on shroud.
7	50	Torque to 11-13 ft-lbs (1,5-1,8 m/kg).
7	51	Torque to 11-13 ft-lbs (1,5-1,8 m/kg).
13B	5	Torque the switch terminal screws and the switch mounting nut to 4.0-4.5 in-lbs (0,45-0,50 Nm).
13B	7	Torque to 14-16 in-lbs (1.6-1.8 Nm).

Enerpac Worldwide Locations

Africa

ENERPAC Middle East FZE
Office 423, JAFZA 15
P.O. Box 18004
Jebel Ali, Dubai
United Arab Emirates
Tel: +971 (0)4 8872686
Fax: +971 (0)4 8872687

Australia, New Zealand

Actuant Australia Ltd.
Block V Unit 3
Regents Park Estate
391 Park Road
Regents Park NSW 2143
(P.O. Box 261) Australia
Tel: +61 297 438 988
Fax: +61 297 438 648

Brazil

Power Packer do Brasil Ltda.
Rua dos Inocentes, 587
04764-050 - Sao Paulo (SP)
Tel: +55 11 5687 2211
Fax: +55 11 5686 5583
Toll Free in Brazil:
Tel: 0800 891 5770
vendasbrasil@enerpac.com

Canada

Actuant Canada Corporation
6615 Ordan Drive, Unit 14-15
Mississauga, Ontario L5T 1X2
Tel: +1 905 564 5749
Fax: +1 905 564 0305
Toll Free:
Tel: +1 800 268 4987
Fax: +1 800 461 2456
Technical Inquiries:
techservices@enerpac.com

China

Actuant Industries Co. Ltd.
No. 6 Nanjing Road
Taicang Economic Dep Zone
Jiangsu, China
Tel: +86 0512 5328 7529
+86 0512 5328 7500 7529
Fax: +86 0512 5335 9690

Actuant China Ltd. (Beijing)

709B Diyang Building
Xin No. 2
Dong San Huan North Rd.
Beijing City
100028 China
Tel: +86 10 845 36166
Fax: +86 10 845 36220

Central and Eastern Europe, Greece

ENERPAC GmbH
P.O. Box 300113
D-40401 Düsseldorf
Willstätterstrasse13
D-40549 Düsseldorf
Germany
Tel: +49 211 471 490
Fax: +49 211 471 49 28

France, Switzerland francophone

ACTUANT - ENERPAC
France S.A., ZA de Courtaboeuf
32, avenue de la Baltique
91140 Villebon / Yvette
France
Tel: +33 1 60 13 68 68
Fax: +33 1 69 20 37 50

Germany, Austria and Switzerland and Baltic States

ENERPAC GmbH
P.O. Box 300113
D-40401 Düsseldorf
Willstätterstrasse13
D-40549 Düsseldorf
Germany
Tel: +49 211 471 490
Fax: +49 211 471 49 28

India

ENERPAC Hydraulics
(India) Pvt. Ltd.
No. 1A,
Peenya Industrial Area,
IInd Phase
Bangalore, 560 058 India
Tel: +91 80 40 792 777
Fax: +91 80 40 792 792

Italy

ENERPAC S.p.A.
Via Canova 4
20094 Corsico (Milano)
Tel: +39 02 4861 111
Fax: +39 02 4860 1288

Japan

Applied Power Japan LTD KK
Besshochou 85-7
Kita-ku,
Saitama-shi 331-0821
Japan
Tel: +81 48 662 4911
Fax: +81 48 662 4955

Middle East, Turkey and Caspian Sea

ENERPAC Middle East FZE
Office 423, JAFZA 15
P.O. Box 18004
Jebel Ali, Dubai
United Arab Emirates
Tel: +971 (0)4 8872686
Fax: +971 (0)4 8872687

Russia and CIS (excl. Caspian Sea Countries)

Actuant LLC
Admiral Makarov Street 8
125212 Moscow, Russia
Tel: +7-495-9809091
Fax: +7-495-9809092

Sweden, Denmark, Norway, Finland and Iceland

ENERPAC Scandinavia AB
Fabriksgatan 7
412 50 Gothenburg
Sweden
Tel: +46 31 7990281
Fax: +46 31 7990010

Singapore

Actuant Asia Pte. Ltd.
37C, Benoi Road Pioneer Lot,
Singapore 627796
Tel: +65 68 63 0611
Fax: +65 64 84 5669
Toll Free: +1800 363 7722
Technical Inquiries:
techsupport@enerpac.com.sg

South Korea

Actuant Korea Ltd.
3Ba 717,
Shihwa Industrial Complex
Jungwang-Dong, Shihung-Shi, Kyunggi-Dong
Republic of Korea 429-450
Tel: +82 31 434 4506
Fax: +82 31 434 4507

Spain and Portugal

ENERPAC SPAIN, S.L.
Avda. Los Frailes, 40 - Nave C & D
Pol. Ind. Los Frailes
28814 DAGANZO DE ARRIBA (Madrid)
Spain
Tel: +34 91 661 11 25
Fax: +34 91 661 47 89

◆ internet: www.enerpac.com

The Netherlands, Belgium, Luxembourg

ENERPAC B.V.
Galvanistraat 115, 6716 AE Ede
P.O. Box 8097, 6710 AB Ede
The Netherlands
Tel: +31 318 535 911
Fax: +31 318 525 613
+31 318 535 848

Technical Inquiries Europe:
techsupport.europe@enerpac.com

United Kingdom, Ireland

Enerpac Ltd
Bentley Road South
Darlaston, West Midlands
WS10 8LQ, United Kingdom
Tel: +44 (0)121 50 50 787
Fax: +44 (0)121 50 50 799

USA, Latin America and Caribbean

ENERPAC
P.O. Box 3241
6100 N. Baker Road
Milwaukee, WI 53209 USA
Tel: +1 262 781 6600
Fax: +1 262 783 9562

User inquiries:
+1 800 433 2766

Inquiries/orders:
+1 800 558 0530

Technical Inquiries:
techservices@enerpac.com

ENERPAC
704 W. Simonds
Dallas, TX 75159 USA
Tel: +1 972 287 2390
Fax: +1 972 287 4469