


Repair Parts Sheets	Revision	Revision Date	Product Code Beginning
L4367	Rev. A	12/2018	A

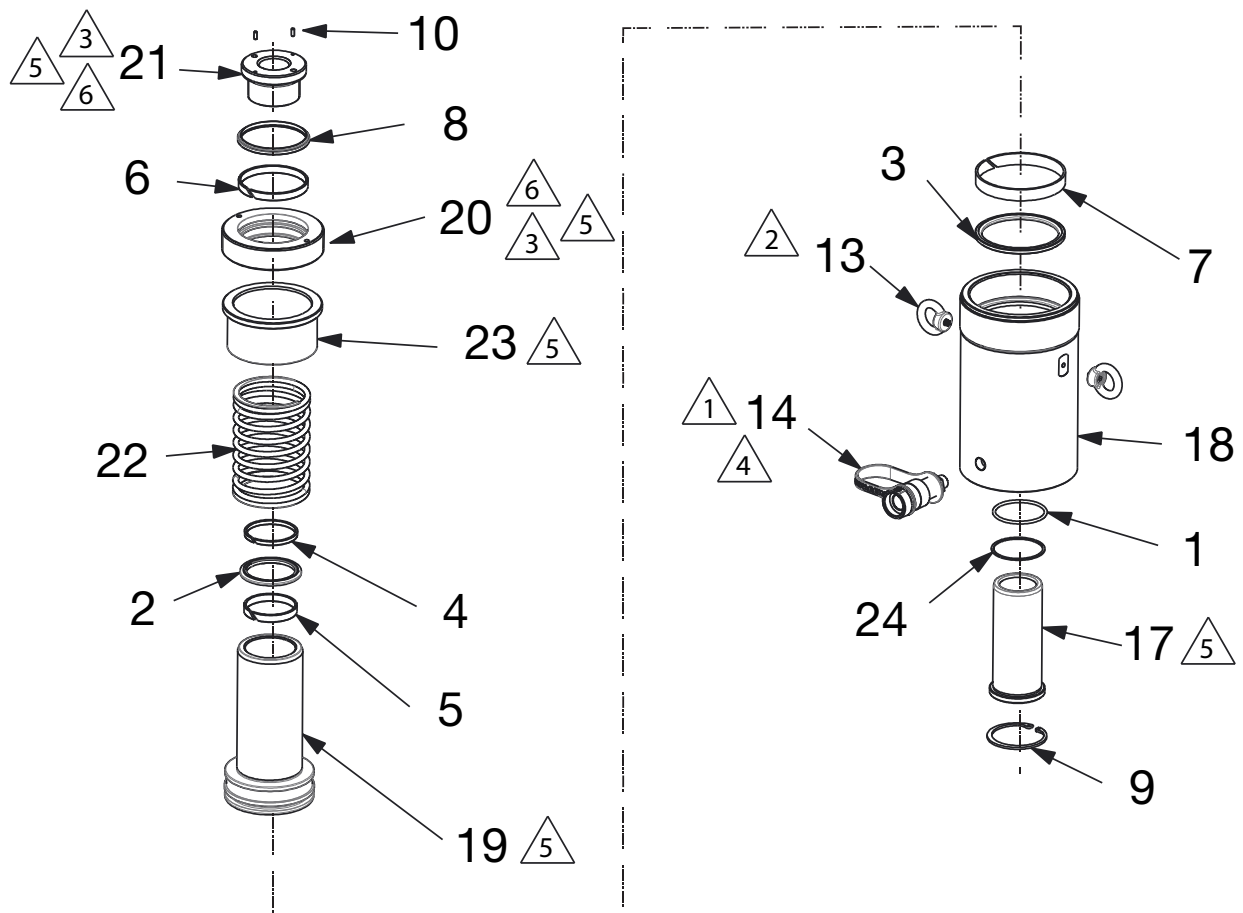

**Note: See Page 2
for parts list.**

Remark Nr	Description
1	Torque to 40-60 ft-lbs [55-81 Nm]
2	Torque to 40-50 in-lbs [3.5-5.5 Nm]
3	Torque till reach mechanical stop
4	Apply Loctite 545 Thread Sealant
5	Apply oil wax before assembly
6	Apply anti-seize to the threads

Repair Parts List			L4367
Item	Description	Qty.	Part Number
1	O-Ring-2-3/8", 2-5/8", ", NBR, 70 Duro	1	●
2	Rod seal 60 X 75.1 X 6.3	1	●
3	Piston Seal, 110 X 94.5 X 6.3	1	●
4	Bearing, 65 X 60 X 5.6	1	●
5	Bearing Rod 60 X 65 X 9.7	1	●
6	Bearing 80X85x9.7	1	●
7	Bearing 110X105x15	1	●
8	Scraper 80X88x4	1	●
9	Ring Ret Din 472 Diameter 68	1	CCA1068044-1C
10	Screw-Set, Flat, Hs, M4x0.7 X 10, 45H, Plain	2	CCA415028-5A
11	Warning Decal 2.19 X 3.18 ■	1	●
12	Warning Don't Disassemble W/Out Reading Inst Label ■	1	●
13	Eyebolt, Rotating, M6	2	DB8099667
14	Cylinder Half-Female C604	1	CR400
16	Holl-O-Cylinder Enerpac Decal ■	1	●
17	Center Tube	1	RCH513013-20
18	Base 50T	1	RCH513030-20
19	Plunger 50T	1	RCH513040-20
20	Stop Ring 50T	1	RCH513044-20
21	Saddle. Threaded	1	RCH513045
22	Spring	1	RCH513110
23	Stop Tube 50 Ton	1	RCH513268-20
24	Backup Ring 65.4X60x1.4 PTFE	1	●
Notes: ● Indicated item included in and available only as a part of the Service Kit RCH513K ■ Not shown in the drawing			



To maintain your warranty:

- Have your products inspected and repaired by an Enerpac Authorized Service Center

ENERPAC 
 Visit www.enerpac.com for the location of the
 Enerpac Authorized Service Center nearest you.