

CAUTION:




Indicates staked threads.

Stake mark must be removed prior to disassembly. Failure to do so may result in damage to parts.

Some cylinder stop rings are assembled with Loctite on threads.

Enerpac suggests staking threads when reassembling.

NOTE: For "O" version cylinders, use Part No. CR33040SR when replacing Item 11.

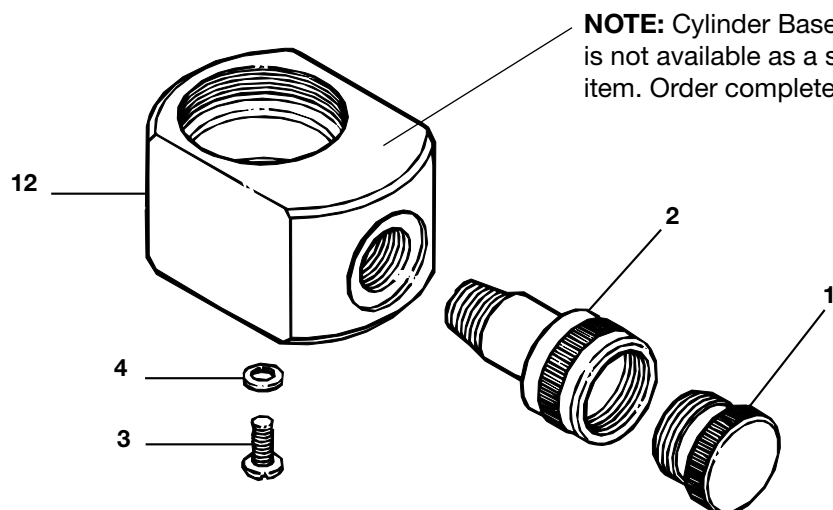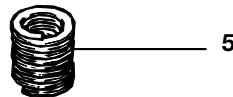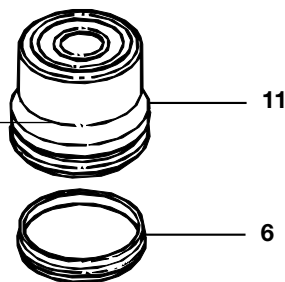

NOTE: Cylinder Base, Item 12, is not available as a service item. Order complete cylinder.

To Protect Your Warranty, Use Only ENERPAC Hydraulic Oil.

Enerpac recommends that all kit components be installed to insure optimum performance of the repaired product.

Repair Parts List				
Item Number	RSM-50	RSM-100	Quantity	Description
1	Z-410	CD-411	1	Dust Cap
2	AR-400	CR-400	1	Coupler
3	B2504028	CBA519028-1E	1	Button Hd. Screw
4	★	★	1	Copper Gasket
5	DA4016950SR	CU725900SR	1	Spring Assembly (incl. items 3, 4)
6	★	★	1	G-T Ring
7	★	★	1	Wiper Ring
8	CR34044	CR28044	1	Stop Ring
11	DA4005040	CR27040	1	Plunger
12	Not a service item. Order complete cylinder.		1	Base
	RSM50K	RSM100K	1	Repair Kit

★Items included in and available only as part of the Repair Kit.
Note: For Viton seals, order Repair Kit RSM50KV or RSM100KV.