


Repair Parts Sheet	Revision	Revision Date	Product Code Beginning
L1283	B	05/2023	O

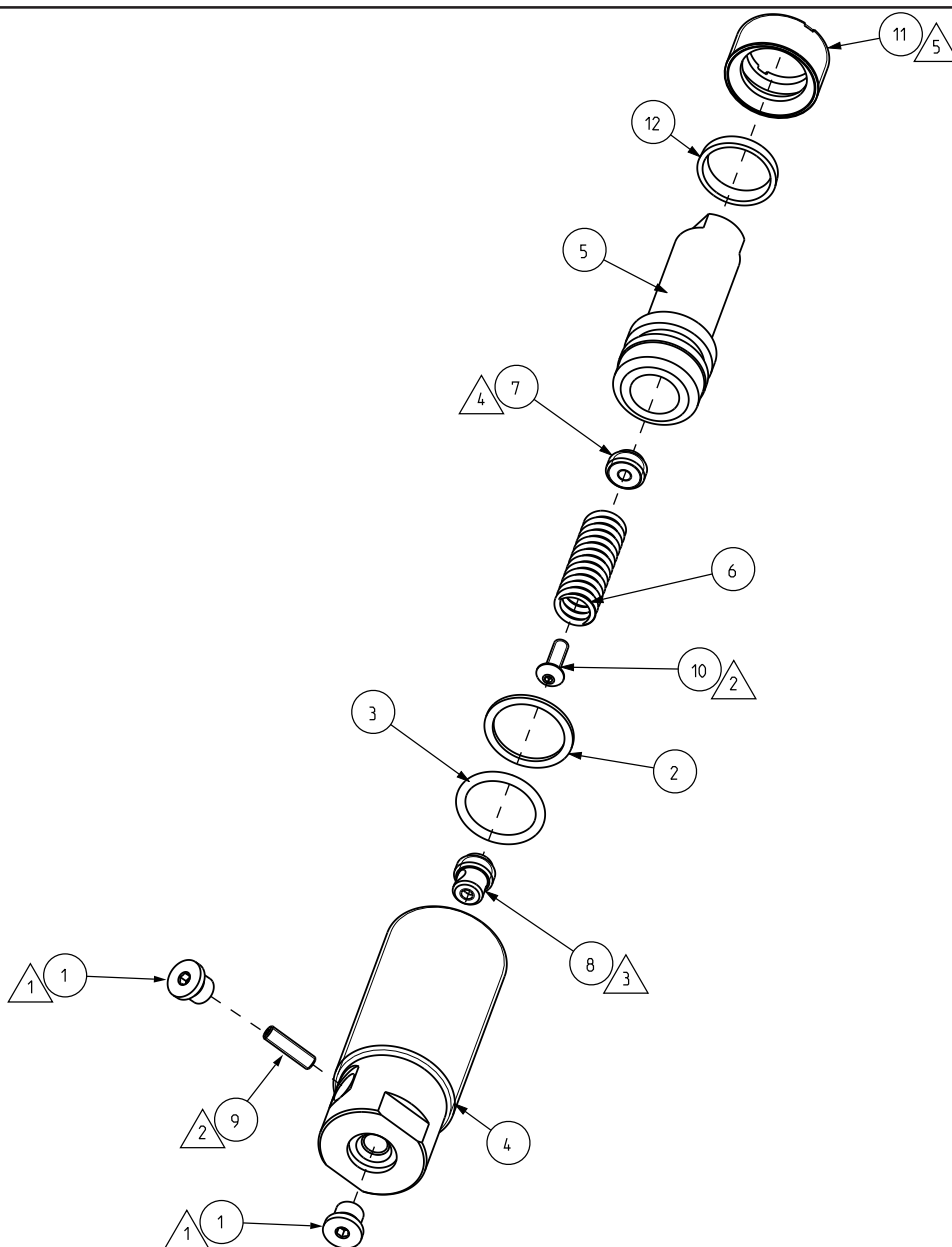

**Note: See Page 2
for parts list.**

Item	Torque / notes
1	Torque to 22-26 in-lbs
2	Apply Loctite 222
3	Spring end to be flush with hole of item 8
4	Spring end to be flush with end of item 7
5	Apply Loctite 243 to threads and assemble stop ring flush

Repair Parts List, Figure 1

L1283

Item	Description	Qty.	Part Number	
			WRT21	WRT22
1	Plug	2	B1001006*	B1001006*
2	Back-up, split	1	B1117564*	B1117564*
3	O-ring	1	B1252503*	B1252503*
4	Base	1	CU201005	CU201005
5	Plunger	1	CU203040	CU203040
6	Spring	1	CU205110	CU206110
7	Spring retainer	1	CU207225	CU207225
8	Spring retainer	1	CU208225	CU208225
9	Set screw	1	CU209028	CU209028
10	Screw cap	1	CU544028	CU544028
11	Stop ring	1	M669044	M669044
12	Wiper ring	1	M777044*	M777044*

* Included in Repair Kit WRT2122K.



To maintain your warranty,
have your products inspected and repaired
by an authorised Enerpac Service Centre
www.enerpac.com