



Operation and Maintenance Manual

XLP-Series 50 and 75 ton Workshop Presses

Document Number: L4599

Document Revision: E

Issue Date: 03-SEP-2024

Language: English EN



To reduce the risk of injury, user must read and understand this document before use.

ABOUT US

Enerpac is a global market leader in high pressure hydraulic tools, controlled force products, portable machining, on-site services and solutions for precise positioning of heavy loads. As a leading innovator with over a 100 year legacy, Enerpac has helped move and maintain some of the largest structures on earth. When safety and precision matter, elite professionals in industries such as aerospace, infrastructure, manufacturing, mining, oil & gas and power generation rely on Enerpac for quality tools, services and solutions. For additional information, visit www.enerpac.com.



www.facebook.com/enerpac



www.youtube.com/enerpac



www.linkedin.com/company/enerpac




www.twitter.com/enerpac

WARRANTY

Refer to the Enerpac Global Warranty document for terms and conditions of the product warranty. Such warranty information can be found at www.enerpac.com.

NAMEPLATE

Refer to the nameplate decal for the press model number. Decal appearance and text may vary depending on location of product manufacture.

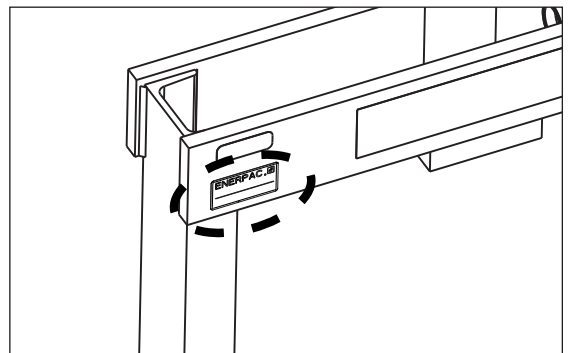

AVAILABLE LANGUAGES

An electronic copy of this document is available online in multiple languages:

- [EN] English - For other languages, visit www.enerpac.com.
- [DE] Deutsch - Weitere Sprachen finden Sie unter www.enerpac.com.
- [ES] Español - Para otros idiomas visite www.enerpac.com.
- [FR] Français - Pour toutes les autres langues, rendez-vous sur www.enerpac.com.
- [IT] Italiano - Per altre lingue visitate il sito www.enerpac.com.
- [JA] 日本語 - その他の言語はwww.enerpac.comでご覧いただけます。
- [KO] 한국어 - 이 지침 시트의 다른 언어 버전은 www.enerpac.com.
- [NL] Nederlands - Ga voor de overige talen naar www.enerpac.com.
- [PL] Polski - Inne wersje językowe można znaleźć na stronie www.enerpac.com.
- [PT] Português - Para outros idiomas consulte www.enerpac.com.
- [ZH] 中文 - 如需其他语言, 请前往 www.enerpac.com.

Contents

1. SAFETY	5
1.1 HYDRAULIC PRESS SAFETY PRECAUTIONS.....	5
1.2 ADDITIONAL SAFETY PRECAUTIONS.....	6
2. COMPLIANCE	6
2.1 CONFORMANCE TO NATIONAL AND INTERNATIONAL STANDARDS.....	6
3. FEATURES & COMPONENTS	7
4. PRODUCT DATA.....	8
4.1 DIMENSIONS.....	8
4.2 SPECIFICATIONS	9
5. INSTALLATION	10
5.1 ASSEMBLING THE PRESS FRAME	10
5.2 MOUNTING THE PRESS FRAME.....	25
5.3 MOUNTING THE CABLE WINCH	25
5.4 HYDRAULIC CYLINDER INSTALLATION.....	25
6. OPERATION.....	26
6.1 SYSTEM SET-UP	26
6.2 REMOVING AIR FROM THE HYDRAULIC SYSTEM	26
6.3 HAND PUMPS	26
6.4 AIR POWERED PUMPS	26
6.5 POWER PUMPS	26
6.6 REPOSITIONING THE CYLINDER	26
6.7 BED ADJUSTMENT (RAISING AND LOWERING)	26
7. STORAGE	26
7.1 RECOMMENDED STORAGE	26
8. MAINTENANCE	27
8.1 HYDRAULIC SYSTEM.....	27
8.2 PRESS FRAME.....	27
9. TROUBLESHOOTING	28
10. PARTS LIST	29
10.1 EXPLODED VIEW, XLP-SERIES 50 AND 75 TON.....	29
10.2 PARTS TABLE, XLP-SERIES 50 AND 75 TON (REFER TO DIAGRAM IN SECTION 10.1)	29

1. Safety

Read all instructions carefully. Follow all recommended safety precautions to avoid personal injury as well as damage to the product and / or damage to other property. Enerpac cannot be responsible for any damage or injury from unsafe use, lack of maintenance, or incorrect operation. Do not remove warning labels, tags, or decals. In the event that any questions or concerns arise, contact Enerpac or a local Enerpac distributor for clarification.

Save these instructions for future use.

If you have never been trained on high-pressure hydraulic safety, consult your distributor or service center for information about Enerpac hydraulic safety courses.

This manual follows a system of safety alert symbols, signals, words, and safety messages to warn the user of specific hazards. Failure to comply with these warnings could result in death or serious personal injury, as well as damage to the equipment or other property.



The Safety Alert Symbol appears throughout this manual. It is used to alert you to potential physical injury hazards. Pay close attention to Safety Alert Symbols and obey all safety messages that follow this symbol to avoid the possibility of death or serious injury.

Safety Alert Symbols are used in conjunction with certain Signal Words that call attention to safety messages or property damage messages and designate a degree or level of hazard seriousness. The Signal Words used in this manual are WARNING, CAUTION, and NOTICE.

WARNING Indicates a hazardous situation that, if not avoided, could result in death or serious personal injury.

CAUTION Indicates a hazardous situation that, if not avoided, could result in minor or moderate personal injury.

NOTICE Indicates information considered important, but not hazard related (e.g. messages related to property damage). Please note that the Safety Alert Symbol will not be used with the signal word.

1.1 Hydraulic Press Safety Precautions

WARNING

Failure to observe and comply with the following precautions could result in death or serious personal injury. Property damage could also occur.

- Ensure force application point on workpiece is centered under the press cylinder and that the entire cylinder saddle is in contact with the workpiece.
- Avoid side loading the press cylinder and workpiece as significant damage or physical injury could occur.
- Where possible, use a safety screen for safety purposes.
- Ensure the material placed on the press bed is rated for press capacity.
- Verify hydraulic components (pump, cylinder, hoses, and accessories) remain in good working condition.
- Use only accessories (such as press plates and V-Blocks) of adequate design and sufficient rating to safely secure the workpiece during application. Use of Enerpac V-Blocks (Model VB-501 for the XLP50 and VB-101 for the XLP75 - optional accessory) is strongly recommended.
- Do not use the press for pulling applications. The XLP-Series Hydraulic Press is designed *only* for pressing applications.
- Do not position or hold workpieces when load is being applied or while workpieces are under load.
- Keep all body parts away from the press cylinder and workpieces while press is in use.
- Ensure that press frame is secured to the floor, workbench or other solid surface.
- Ensure area around the press is safe and secure before operating press.
- Ensure proper personal protective equipment (PPE) is in place when using the press.
- Be certain that the operator has read and understood all operating instructions provided with the press, pump and all accessories.
- Be sure the operator has completed appropriate safety training, specific to the work surroundings. The operator should be thoroughly familiar with the controls and the proper use of the press.

1.2 Additional Safety Precautions

WARNING

Failure to observe and comply with the following precautions could result in death or serious personal injury. Property damage could also occur.

- Always wear and/or use appropriate personal protective equipment (PPE) such as hard hat, hearing protection, safety shoes and gloves (at a minimum rigger type gloves).
- Ensure that protective clothing will not interfere with safe operation of the tool or restrict the ability to communicate with co-workers.
- The operator must be of at least the minimum age required by applicable local regulations, laws and the facility standard operating procedures.
- Be sure your workplace is safe. Follow the instructions in your workplace's standard operating procedures and be sure to observe all communicated safety precautions.
- Be sure appropriate guards (user-supplied) are securely in position and free from damage.
- Maximum allowable hydraulic system operating pressure is 10,000 psi [700 bar]. Do not exceed this pressure setting.
- Always be sure that pump is stopped and all pressure is fully relieved (0 psi/bar) before disconnecting or connecting the hydraulic hose. The sudden and uncontrolled release of pressurized hydraulic oil could occur if hose is disconnected while under pressure.
- Never attempt to connect or disconnect hoses while the pump is on and/or the system is pressurized.
- Before use, be certain that all hose couplers are fully connected. There should be no threads visible between the male and female coupler halves.
- Never apply more hydraulic pressure to any tool, hose, fitting or accessory than the maximum allowable pressure as stated in the manufacturer's specifications. The system operating pressure must not exceed the pressure rating of the lowest rated component in the system.
- Do not abuse or overstress hoses in any way. Do not bend hoses excessively.
- Take every precaution to prevent oil leaks from occurring. High pressure oil leaks can penetrate the skin, resulting in serious injury.

NOTICE

Failure to observe and comply with the following precautions could result in property damage and/or void the product warranty.

- Never carry the pump by its hose.
- If oil leakage is present from hydraulic cylinder, replace seals as required before placing the press back into service.
- If the press becomes damaged in any way, have it repaired and checked for proper operation before placing it back into service.
- Always follow the inspection and maintenance instructions contained in this manual. Perform maintenance and inspection activities at the specified time intervals.
- Always use Enerpac pumps and hoses.
- Always use Enerpac replacement parts.

2. Compliance




2.1 Conformance to National and International Standards



Enerpac declares that the product(s) have been tested and conforms to applicable standards and the product(s) are compatible to all EU and UK Requirements.

Copies of the EU Declaration as well as the UK Self-Declaration are enclosed with each shipment

3. Features & Components

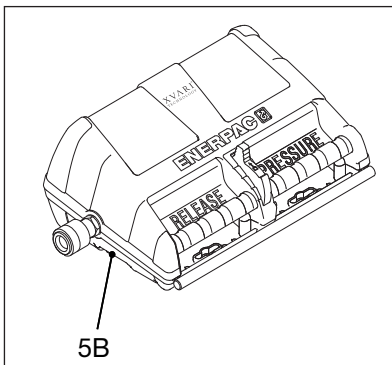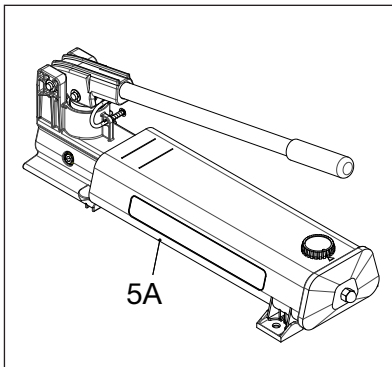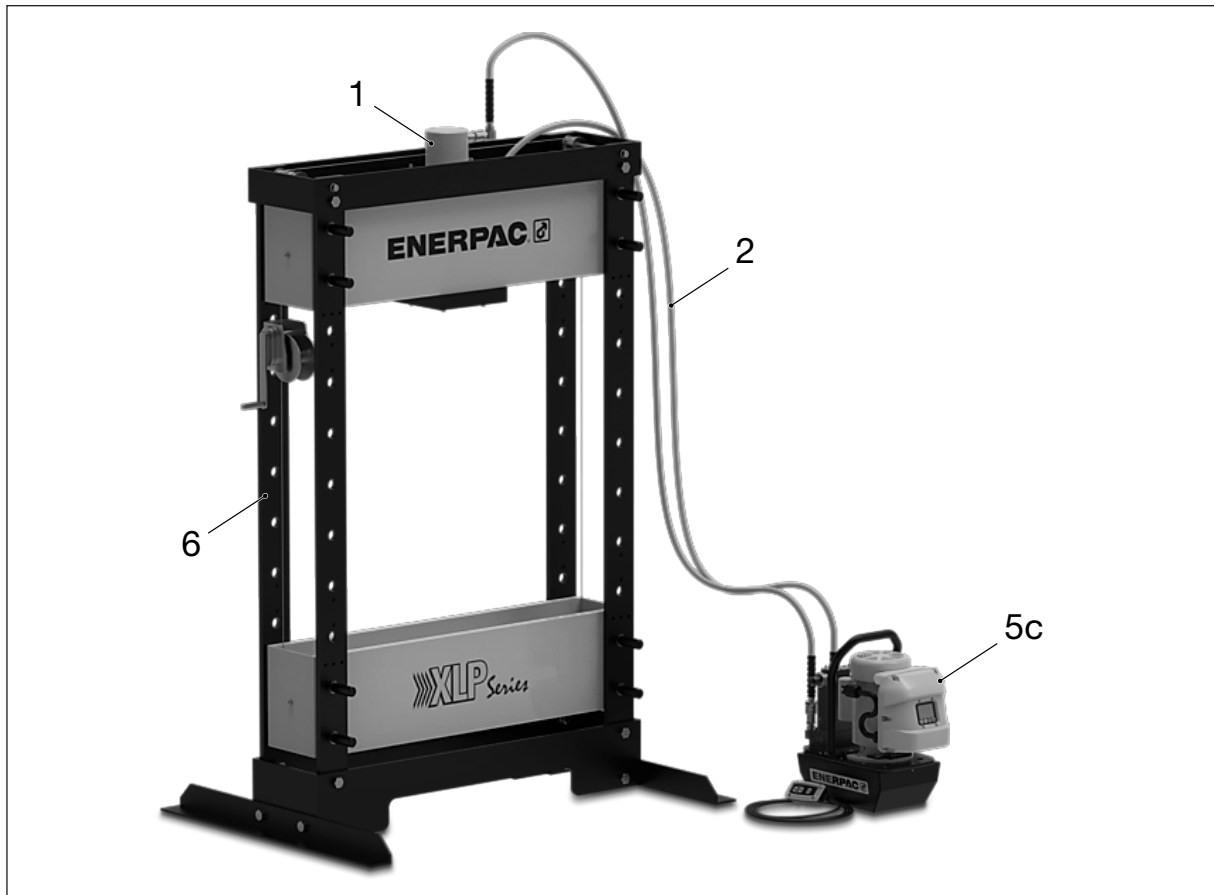


Key:

- 1. Hydraulic Cylinder
- 2. Hydraulic Hose
- 3. Hydraulic Pressure Gauge (not shown)
- 4. Gauge Adapter (not shown)
- 5A. Hydraulic Pump, Hand Operated
(Models XLP506P802 and XLP506P802U only)
- 5B. Hydraulic Pump, Air Operated
(Models XLP506XA12G, XLP506XA12GU,
XLP756XA12G and XLP756XA12GU only)
- 5C. Hydraulic Pump, Electric Operated (Models
XLP506ZES, XLP5013ZES, XLP5013ZEBU
and XLP5013ZEIU only)
- 6. Frame

4. Product Data

4.1 Dimensions

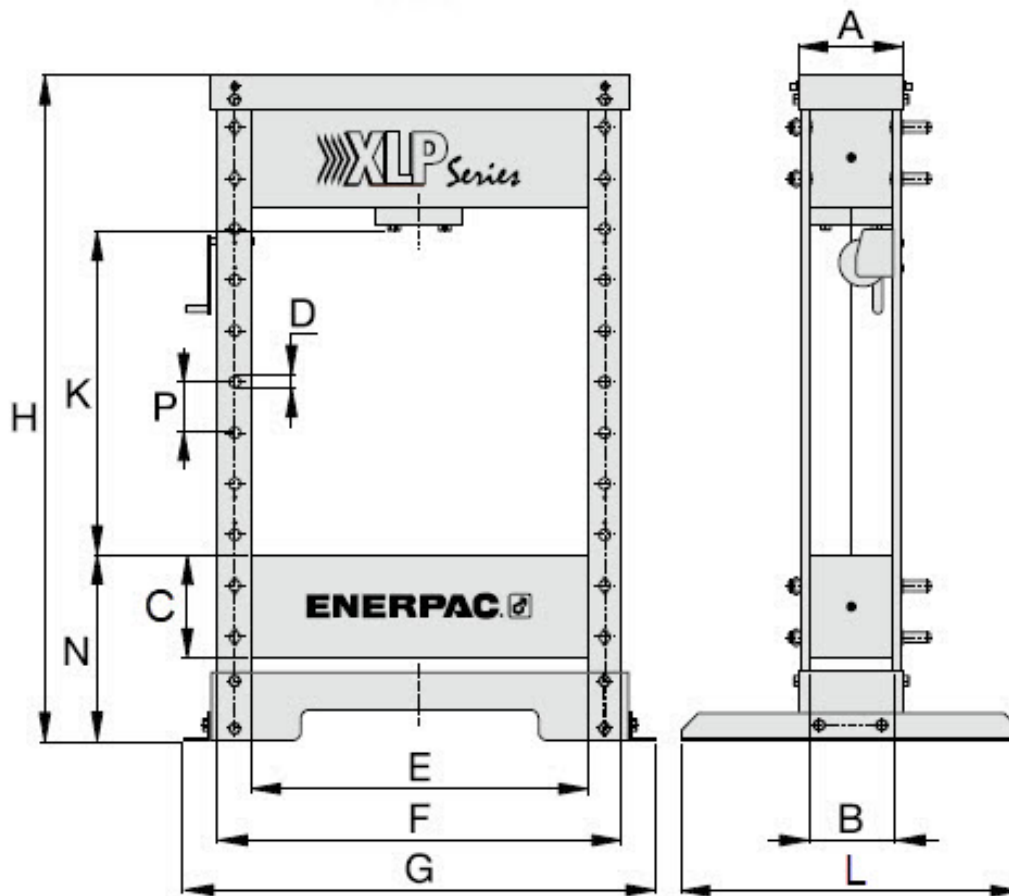

Press Model Number	Rapid Advance	Pressing	Dimensions mm [in]												Weight
	mm/sec [in/sec]		A	B	C	D	E	F	G	H	K	L	N	P	kg [lb]
XLP506P802*	{ 5,5 } [0.22]**	{ 0,3 } [0.01]**	310 [12.20]	240 [9.45]	300 [11.81]	32 [1.26]	990 [38.98]	1190 [46.85]	1390 [54.72]	1995 [76.97]	210-960 [8.27-37.80]	1000 [39.37]	540 [21.46]	150 [5.91]	595 [1312]
XLP506P802U															
XLP506XA12G*	4,7 [0.18]	0,6 [0.02]	310 [12.20]	240 [9.45]	300 [11.81]	32 [1.26]	990 [38.98]	1190 [46.85]	1390 [54.72]	1995 [76.97]	210-960 [8.27-37.80]	1000 [39.37]	540 [21.46]	150 [5.91]	600 [1323]
XLP506XA12GU															
XLP506ZES*	10,0 [0.98]	2,0 [0.09]	310 [12.20]	240 [9.45]	300 [11.81]	32 [1.26]	990 [38.98]	1190 [46.85]	1390 [54.72]	1995 [76.97]	210-960 [8.27-37.80]	1000 [39.37]	540 [21.46]	150 [5.91]	660 [1455]
XLP5013ZES*															700 [1543]
XLP5013ZEUB	10,0 [0.98]	2,0 [0.09]	310 [12.20]	240 [9.45]	300 [11.81]	32 [1.26]	990 [38.98]	1190 [46.85]	1390 [54.72]	1995 [76.97]	210-960 [8.27-37.80]	1000 [39.37]	540 [21.46]	150 [5.91]	694 [1530]
XLP5013ZEIU															
XLP756XA12G*	3,2 [0.13]	0,4 [0.02]	420 [16.54]	330 [12.99]	300 [11.81]	40 [1.65]	990 [38.98]	1240 [48.43]	1430 [56.3]	1995 [76.97]	205-955 [8.07-37.60]	1000 [39.37]	540 [21.46]	150 [5.91]	900 [1984]
XLP756XA12GU															

** {...} = advance speed in mm[in] per handpump stroke.

4.2 Specifications

Press Model Number	Press Capacity		Maximum Daylight mm[in]		Power Source						Cylinder	
					Pump Type			Valve Type		Pump Model No.		
	Tons	kN	Vertical	Horizontal	Man.	Elec.	Air	Man.	Elec.		Stroke mm[in]	Model No.
XLP506P802*	50	498	960 [37.80]	990 [38.98]	●			●		P802	159 [6.25]	RC506
XLP506P802U	50	498	960 [37.80]	990 [38.98]	●			●		P802	159 [6.25]	RC506
XLP506XA12G*	50	498	960 [37.80]	990 [38.98]			●	●		XA12G	159 [6.25]	RC506
XLP506XA12GU	50	498	960 [37.80]	990 [38.98]			●	●		XA12G	159 [6.25]	RC506
XLP506ZES*	50	498	960 [37.80]	990 [38.98]		●			●	ZE4410SE-E050	156 [6.13]	RR506
XLP5013ZES*	50	498	960 [37.80]	990 [38.98]		●			●	ZE4410SE-E050	334 [13.13]	RR5013
XLP5013ZEBU	50	498	960 [37.80]	990 [38.98]		●			●	ZE4408SB	334 [13.13]	RR5013
XLP5013ZEIU	50	498	960 [37.80]	990 [38.98]		●			●	ZE4408SI	334 [13.13]	RR5013
XLP756XA12G*	75	718	955 [37.60]	990 [38.98]			●	●		XA12G	156 [6.13]	RC756
XLP756XA12GU	75	718	955 [37.60]	990 [38.98]			●	●		XA12G	156 [6.13]	RC756



*50 and 75 ton XLP-Series presses can be ordered as factory assembled press frames.



Add suffix "M" to press model number. Example: XLP506XA12G-M

5. Installation

5.1 Assembling the Press Frame

XLP-50

Lower fixture		② x 1
Upper fixture		③ x 1
Upper/lower bed		④ x 2
Angle		⑥ x 2
Upright 50T		⑦ x 4
Bolsterpin 50T		⑧ x 8
Retaining ring		⑱ x 8
Retaining pin		⑳ x 8
Cable rotation pin		⑨ x 2
Retaining ring		⑳ x 4
Cable wheel		⑩ x 3
Flange 50T		⑪ x 1
M10 threaded rod 420 mm		⑬ x 4
Threaded rod spacer		⑫ x 4
Nut		⑮ x 8
Nut wing		⑳ x 1
Rolling rails		⑬ x 2
Rod axel		⑭ x 2
Wheel		⑮ x 4
Retaining ring		⑰ x 8
M20 Bolt		㉑ x 16
M20 Nut		㉒ x 16



M20 Lock washer		㉓ x 16
M8x20 Bolt		㉔ x 4
M8 Nut		㉕ x 6
M8 Small washer		㉖ x 6
M8 Large washer		㉗ x 4
M8x40 bolt		㉘ x 2
M8 Lock washer		㉙ x 2
Winch		㉚ x 1
Cable		㉛ x 1
Lock washer		㉜ x 8
Nylock nut		㉝ x 3
ENERPAC decal		㉞ x 2
Nameplate		㉟ x 1
Safety decal		㊱ x 2
50T rated cap. decal		㊲ x 2
Read instruction decal		㊳ x 2
XLP-Series decal		㊴ x 2
Cylinder		㊵ x 1
Roller Cable Guide*		㊶ x 1

TORQUE VALVE FOR XLP50 AND XLP75

M8	20 Nm
M10	45 Nm
M20	300 Nm
M24	500 Nm

* Used with Cylinder on XLP5013ZES models only

Lower fixture		② x 1
Upper fixture		③ x 1
Upper/lower bed		④ x 2
Angle		⑥ x 2
Upright 75T		⑦ x 4
Bolsterpin 75T		⑧ x 8
Retaining ring		⑱ x 8
Retaining pin		⑳ x 8
Cable rotation pin		⑨ x 2
Retaining ring		③④ x 4
Cable wheel		⑩ x 3
Flange 75T		⑪ x 1
M10 threaded rod 420 mm		⑬ x 4
Threaded rod spacer		⑫ x 4
Nut		⑮ x 8
Nut wing		③③ x 1
Rolling rails		⑬ x 2
Rod axel		⑭ x 2
Wheel		⑮ x 4
Retaining ring		⑰ x 8
M20 Bolt		⑳ x 4
M20 Nut		㉔ x 4

M20 Lock washer		㉓ x 4
M24 Bolt Upper/Lower fixture		③⑤ x 12
M24 Nut Upper/Lower fixture		③⑥ x 12
M24 Lock washer Upper/Lower fixture		③⑦ x 12
M8x20 bolt		㉔ x 4
M8 Nut		㉕ x 6
M8 Small washer		㉖ x 6
M8 Large washer		㉗ x 4
M8x40 bolt		㉘ x 2
M8 Lock washer		㉙ x 2
Winch		③⑩ x 1
Cable		③① x 1
Lock washer		③⑧ x 8
Nylock nut		③⑨ x 3
ENERPAC decal		④⑩ x 2
Nameplate		④① x 1
Safety decal		④② x 2
75T rated cap. decal		④③ x 2
Read instruction decal		④④ x 2
XLP-Series decal		④⑤ x 2
Cylinder		④⑥ x 1

1




②① x 4




②③ x 4



②② x 4

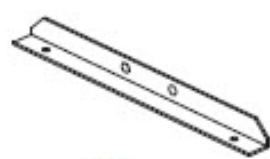


⑥ x 2

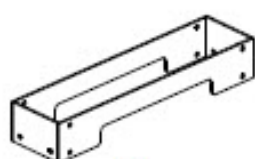





② x 1







2 x 30 mm


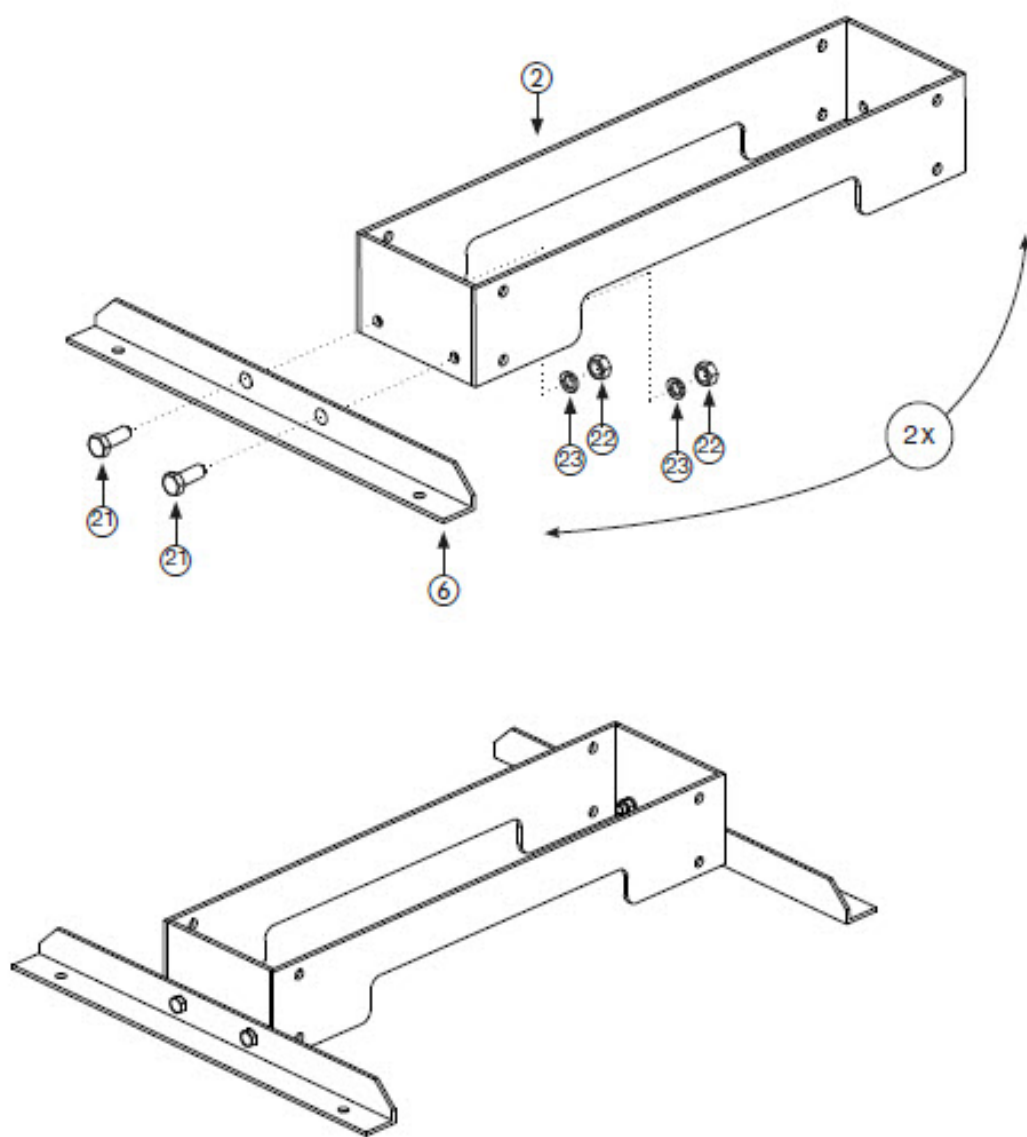


2

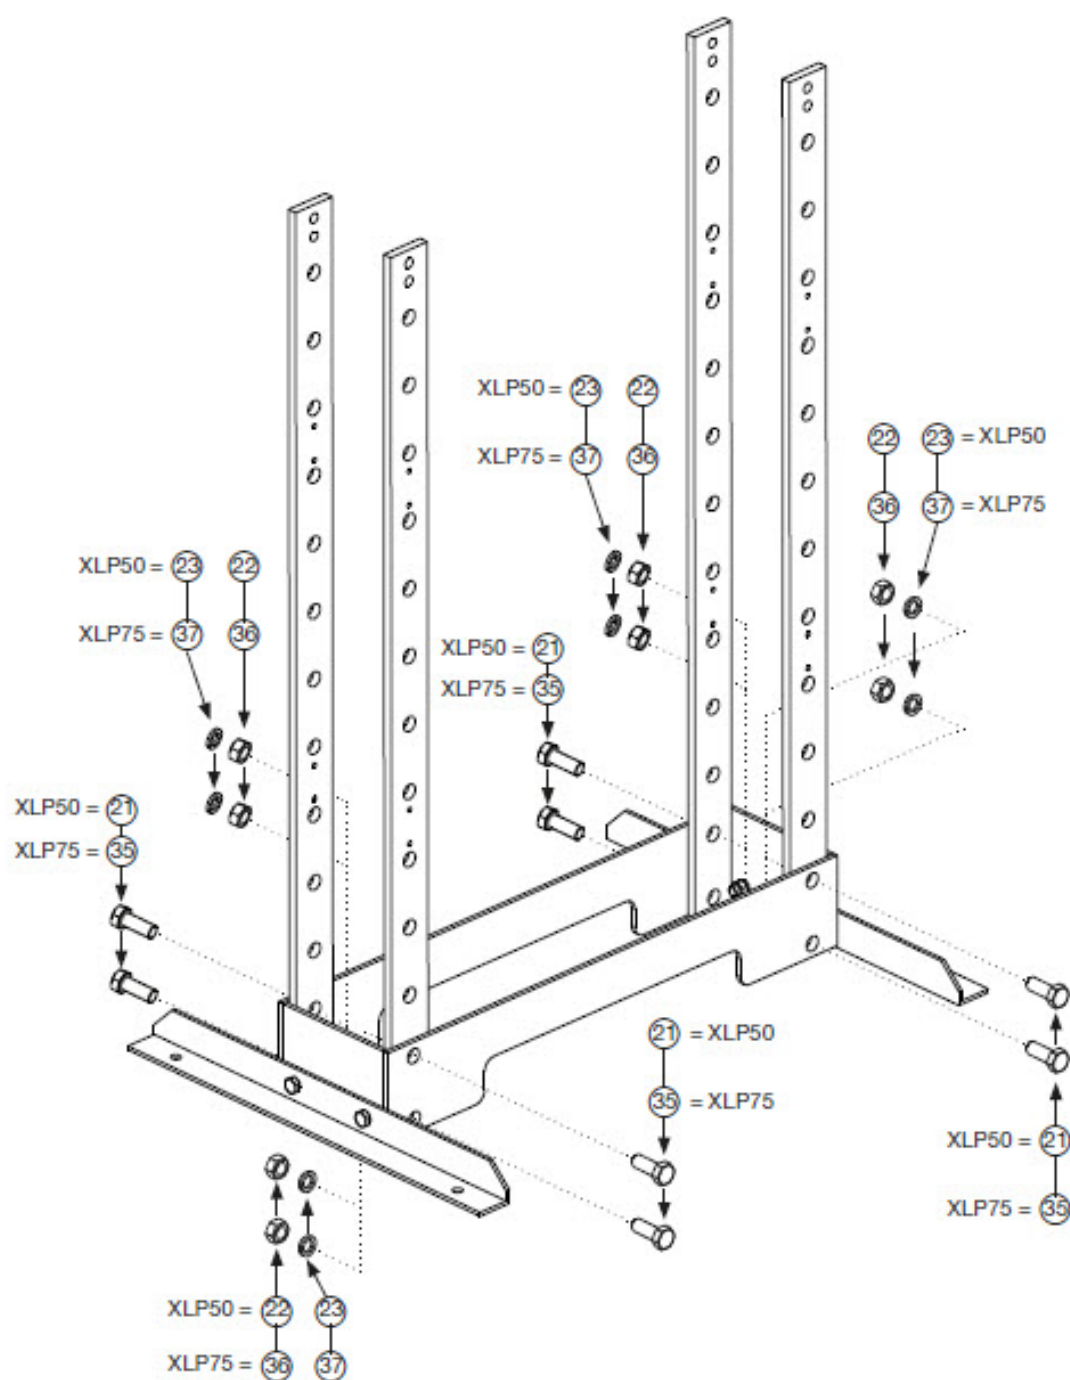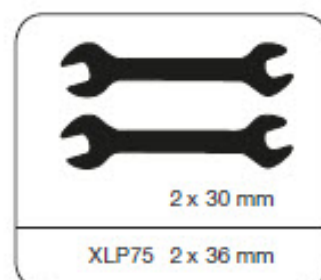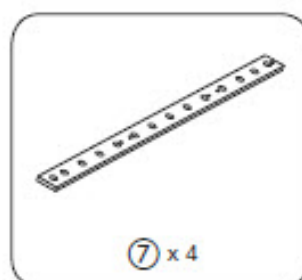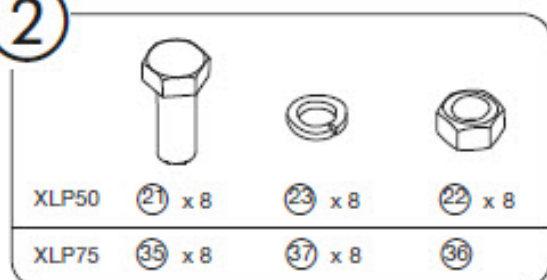

3

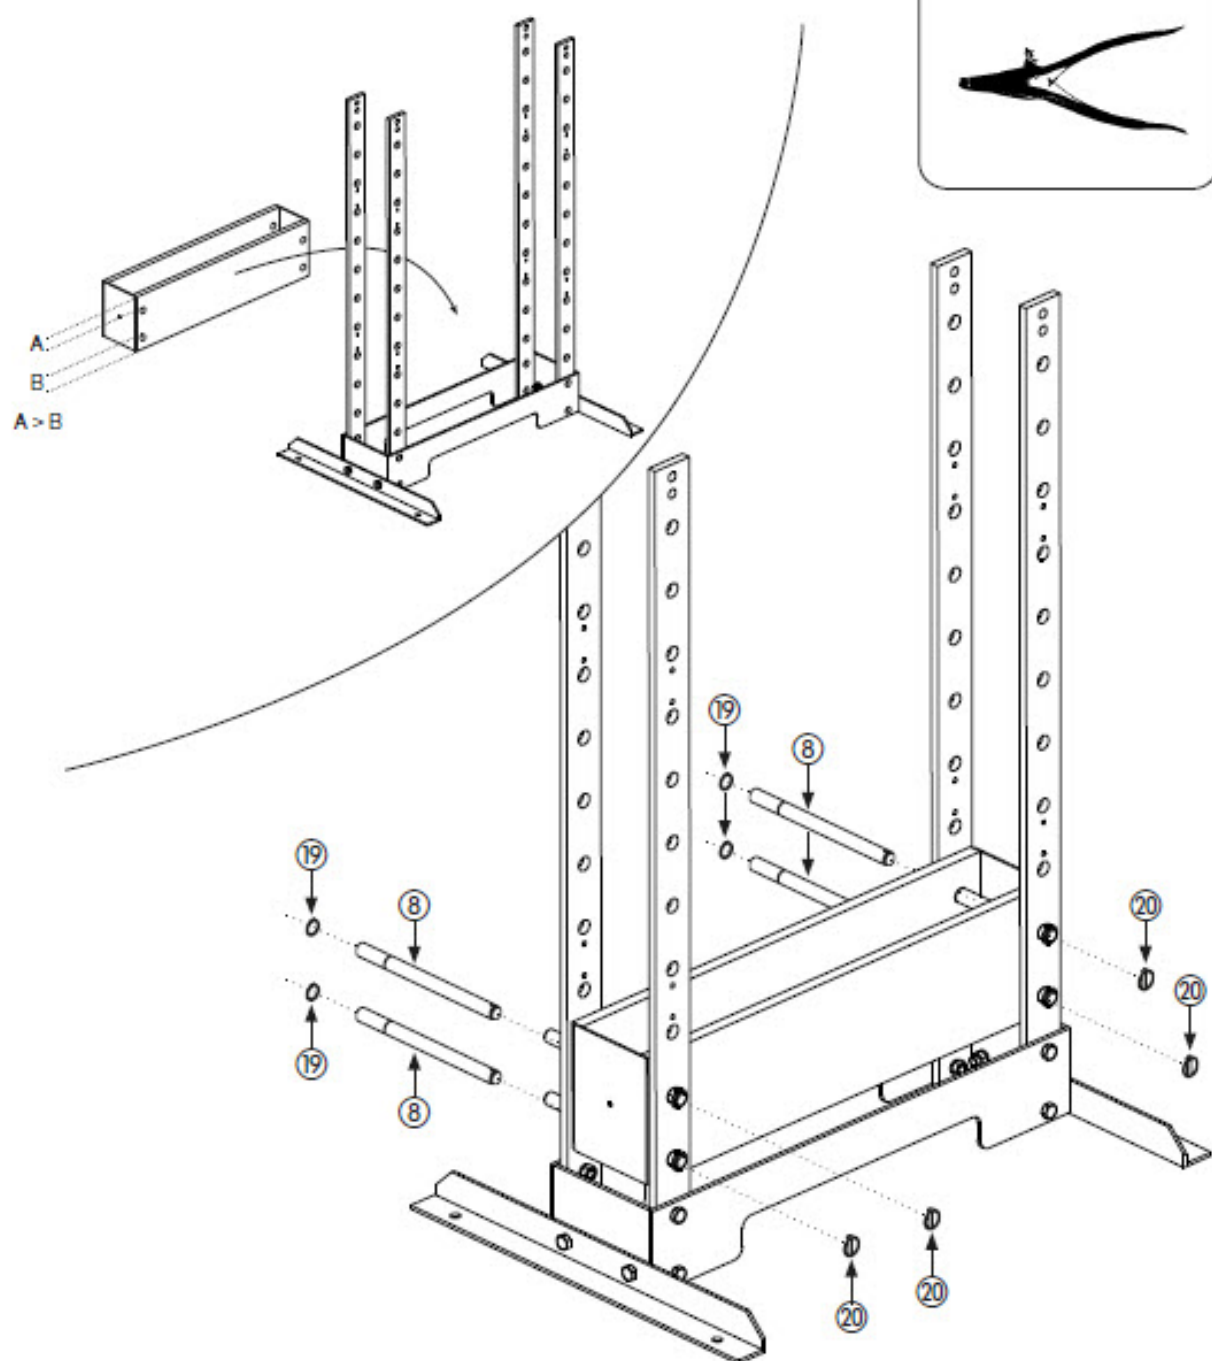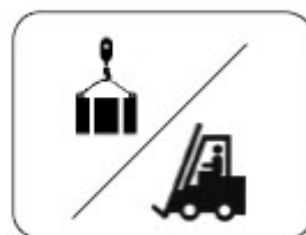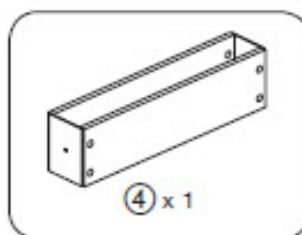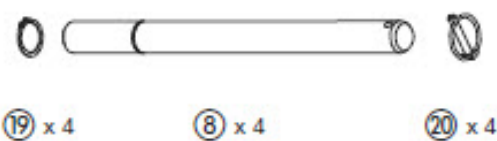

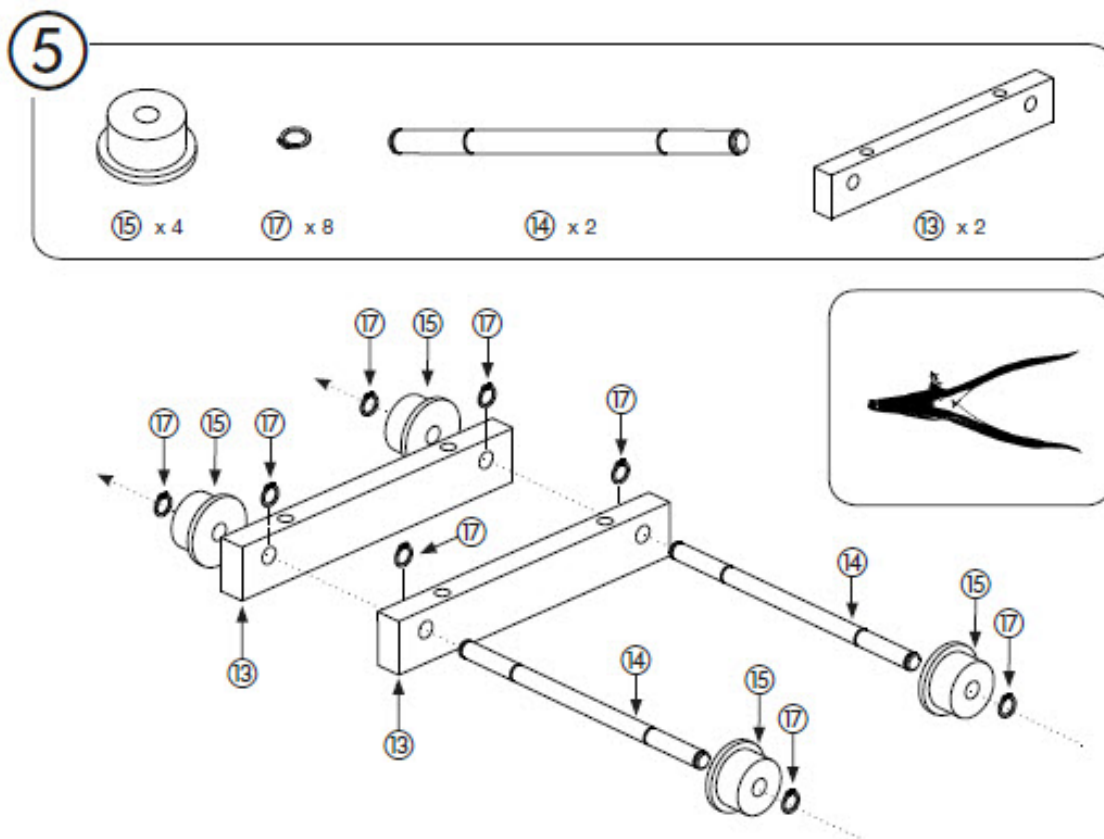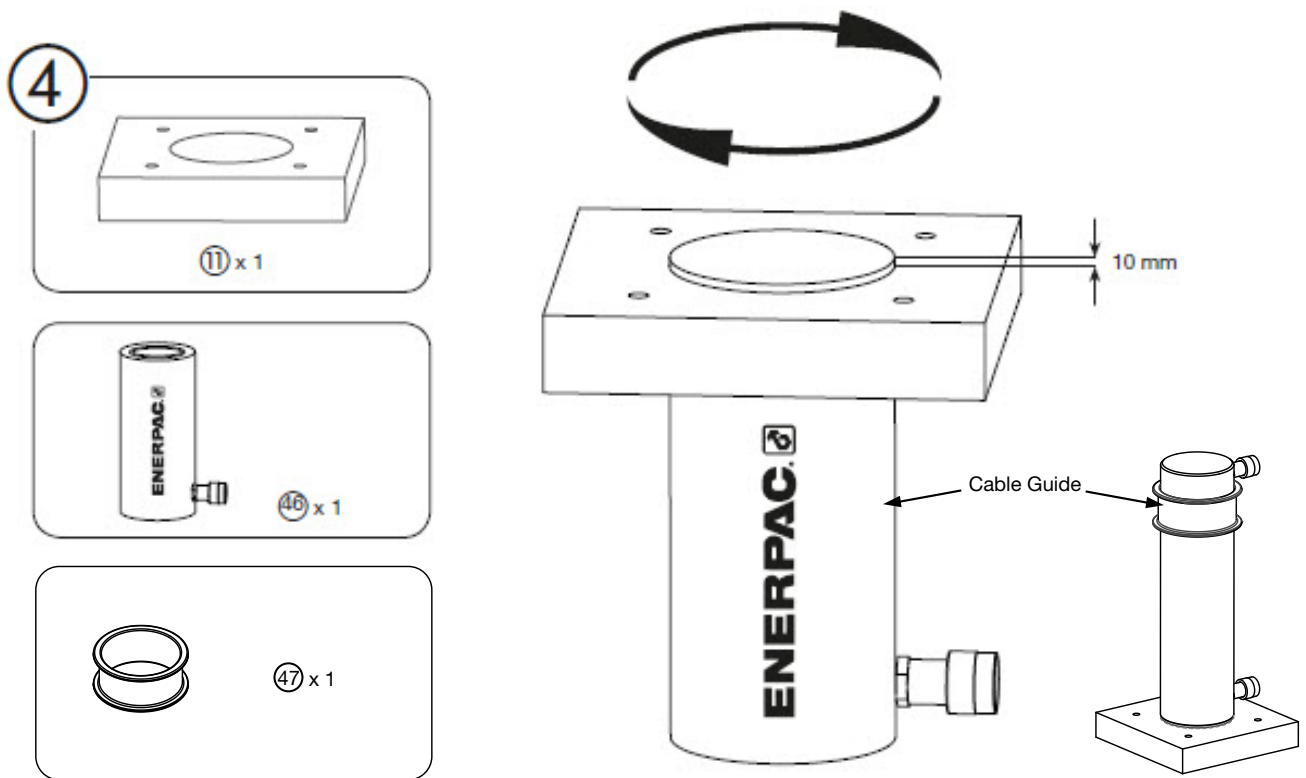

6



18 x 8




38 x 8




16 x 4



2 x 17 mm

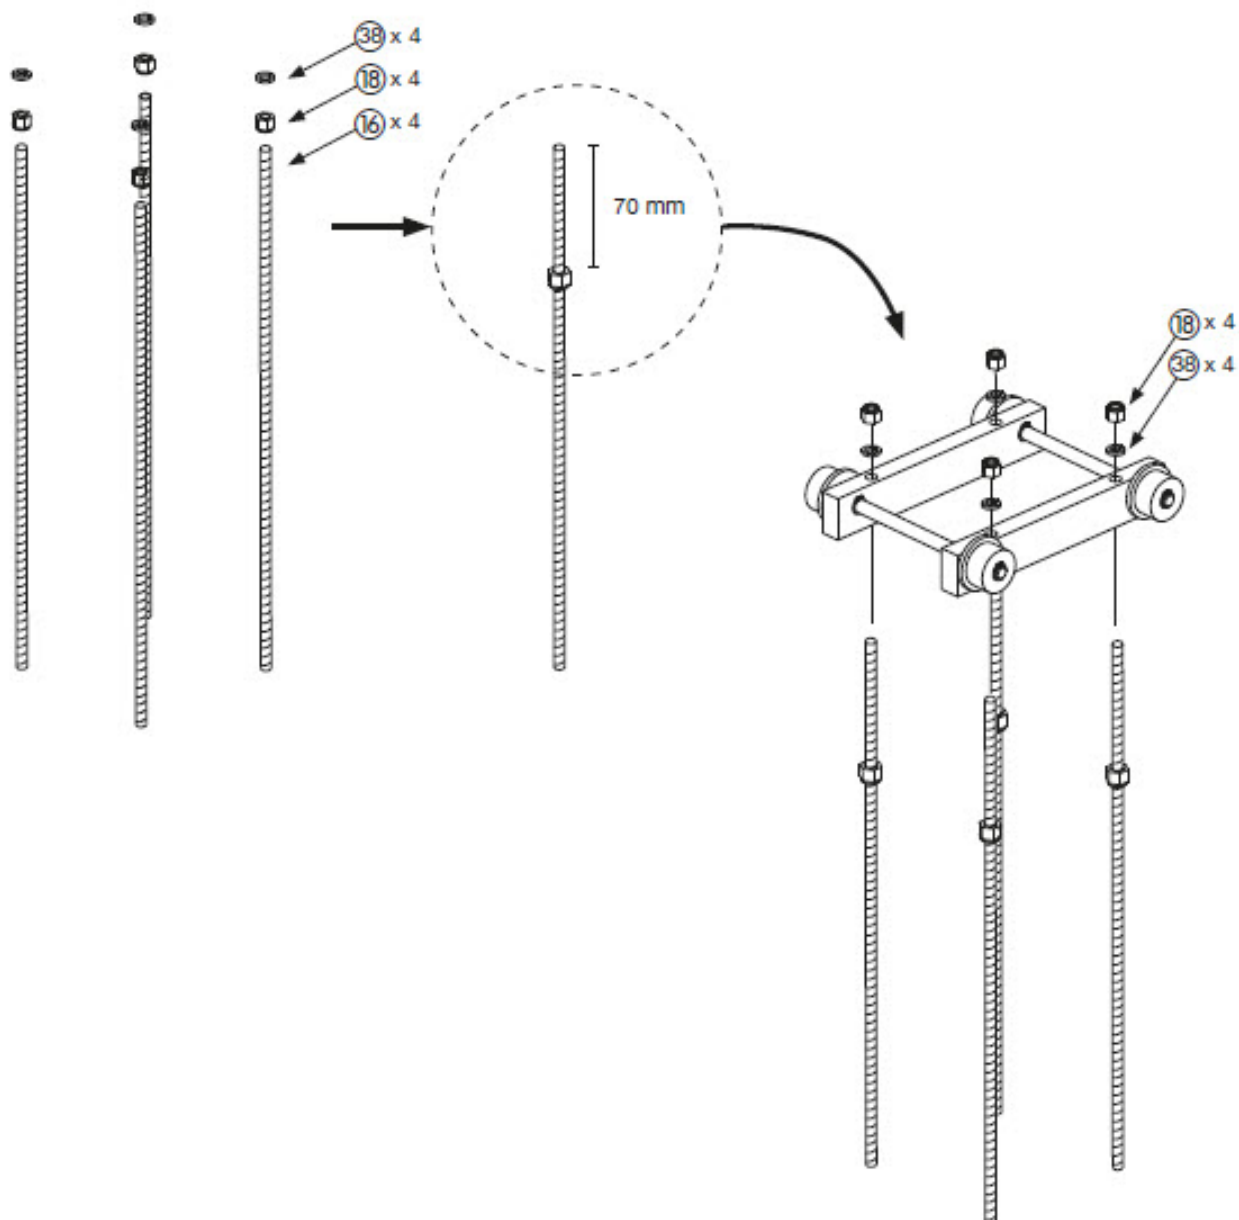

7




12 x 4



39 x 3






33 x 1


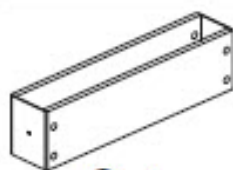


4 x 1






2 x 17 mm

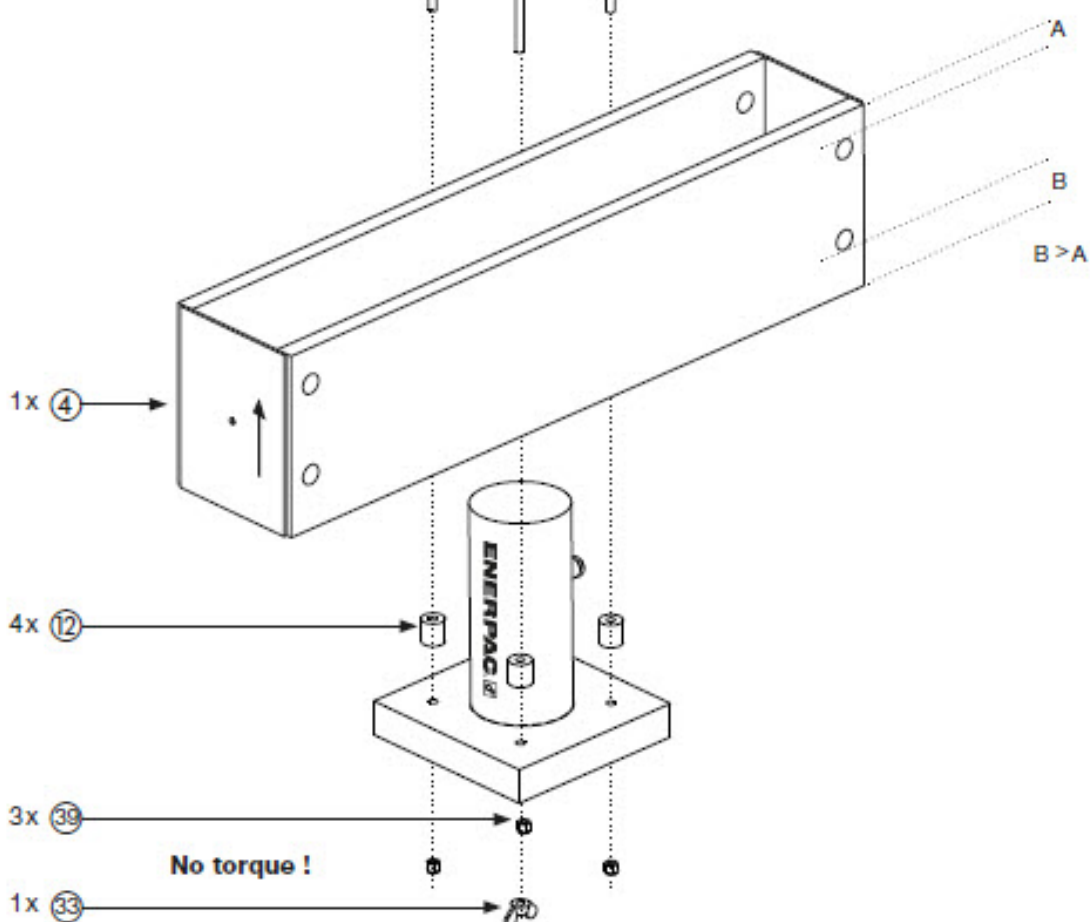
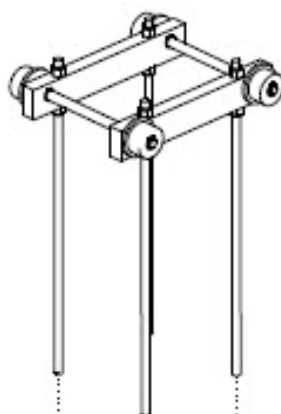
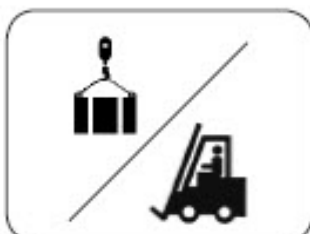


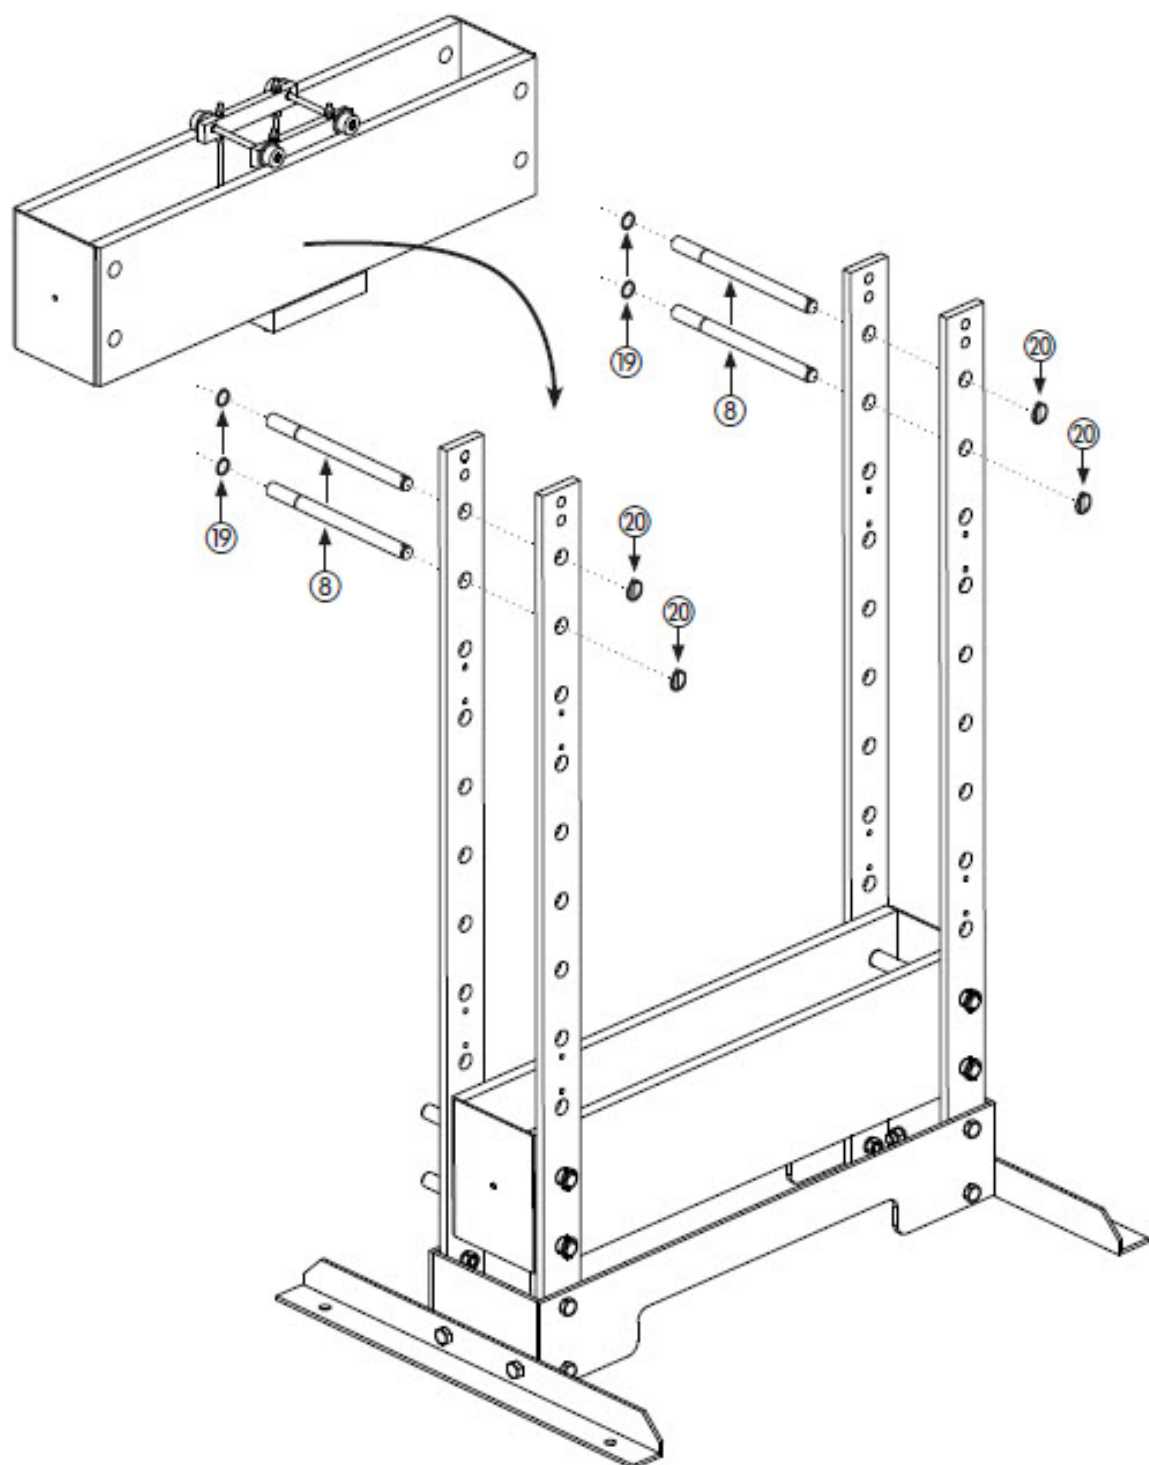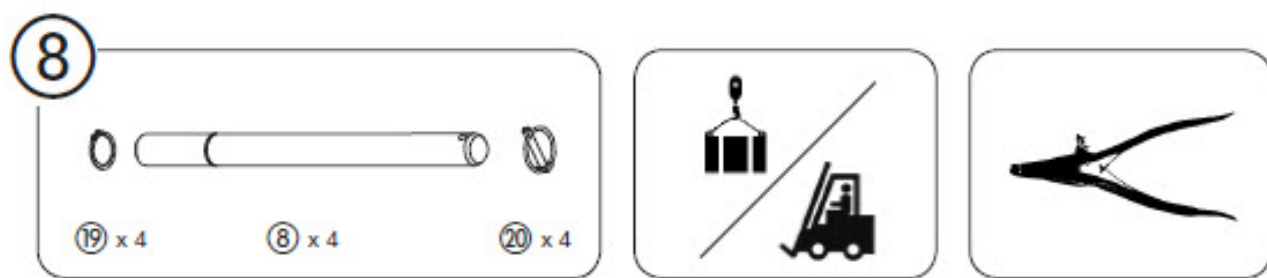

9

		
XLP50 (21) x 4	(23) x 4	(22) x 4
XLP75 (35) x 4	(37) x 4	(36) x 4

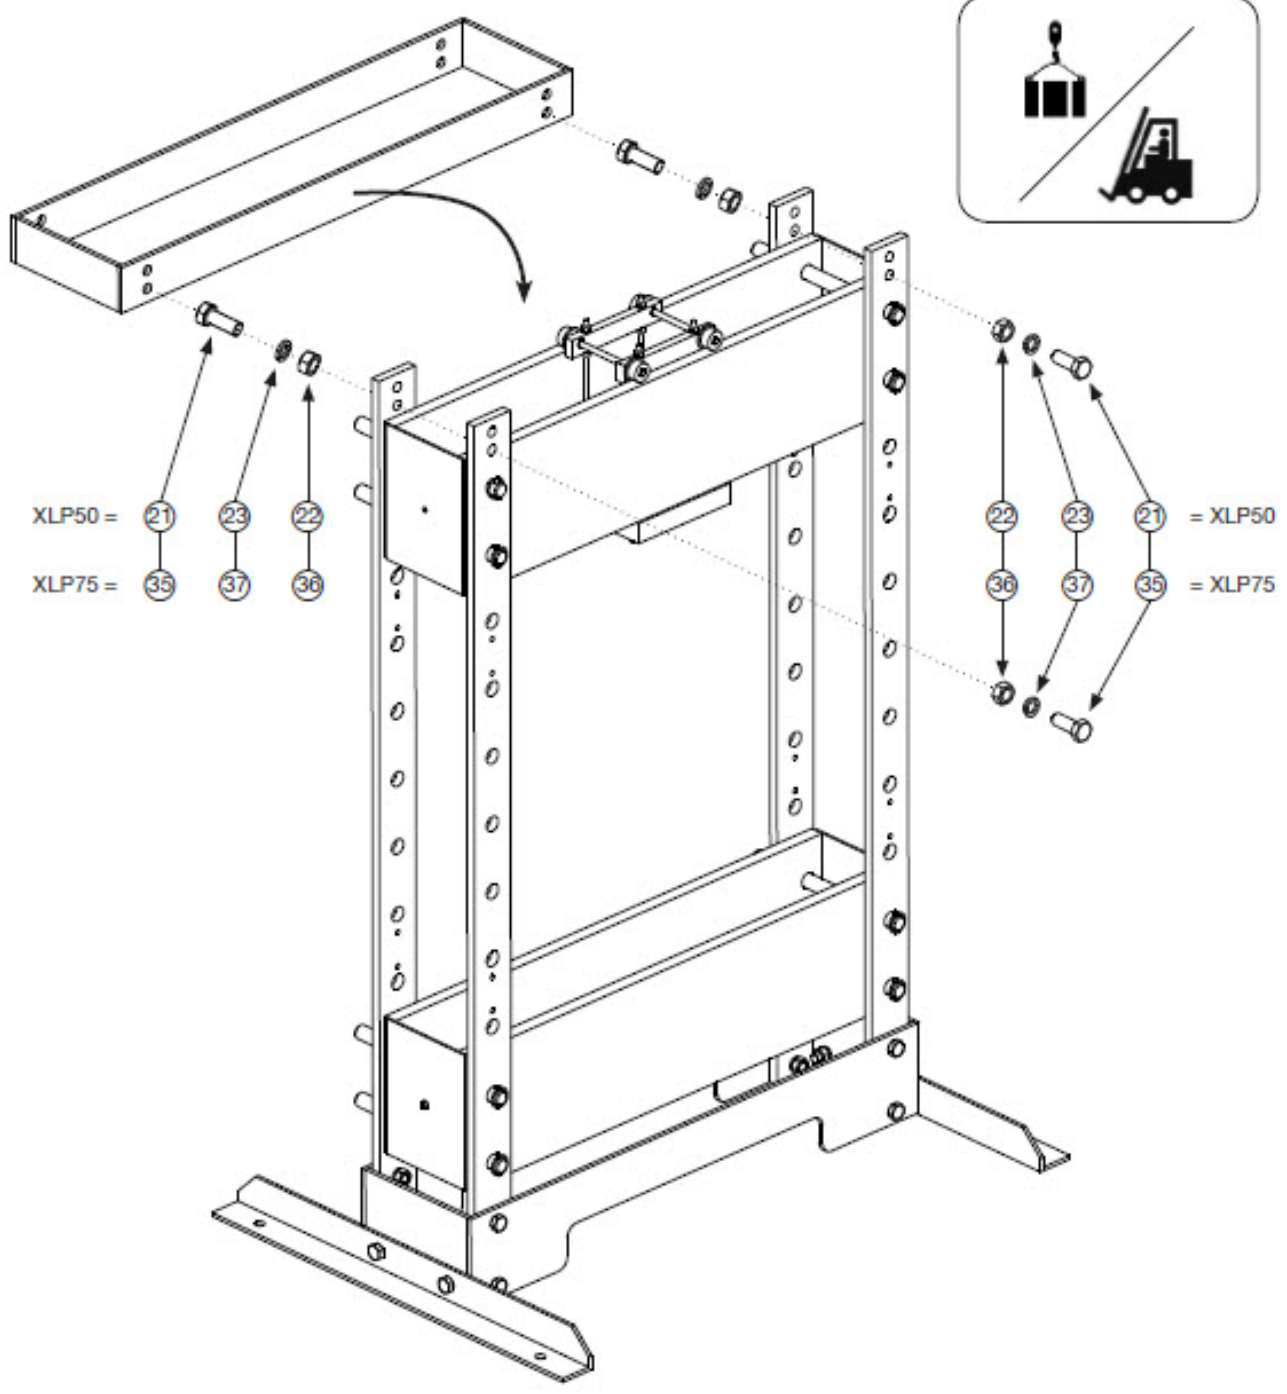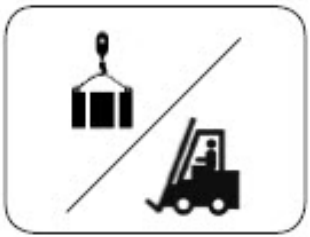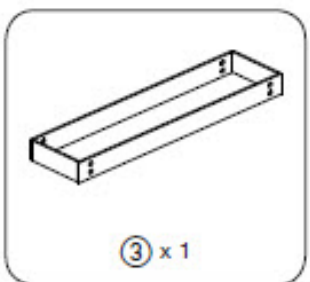

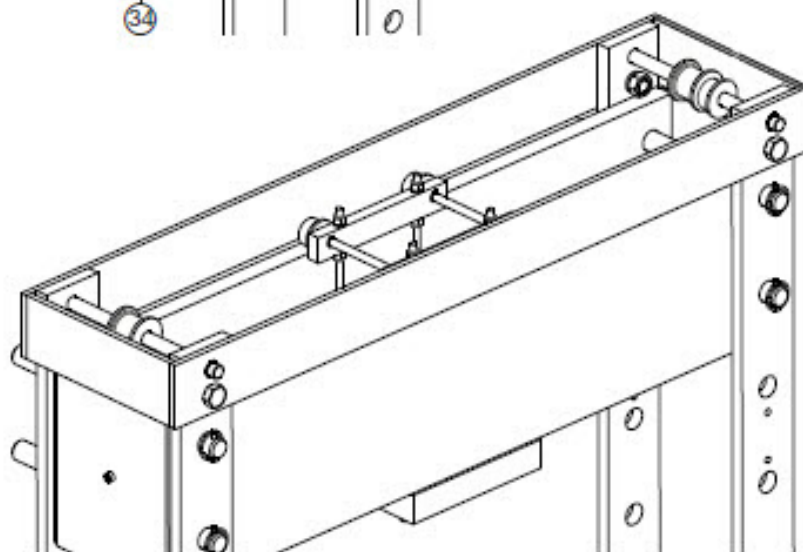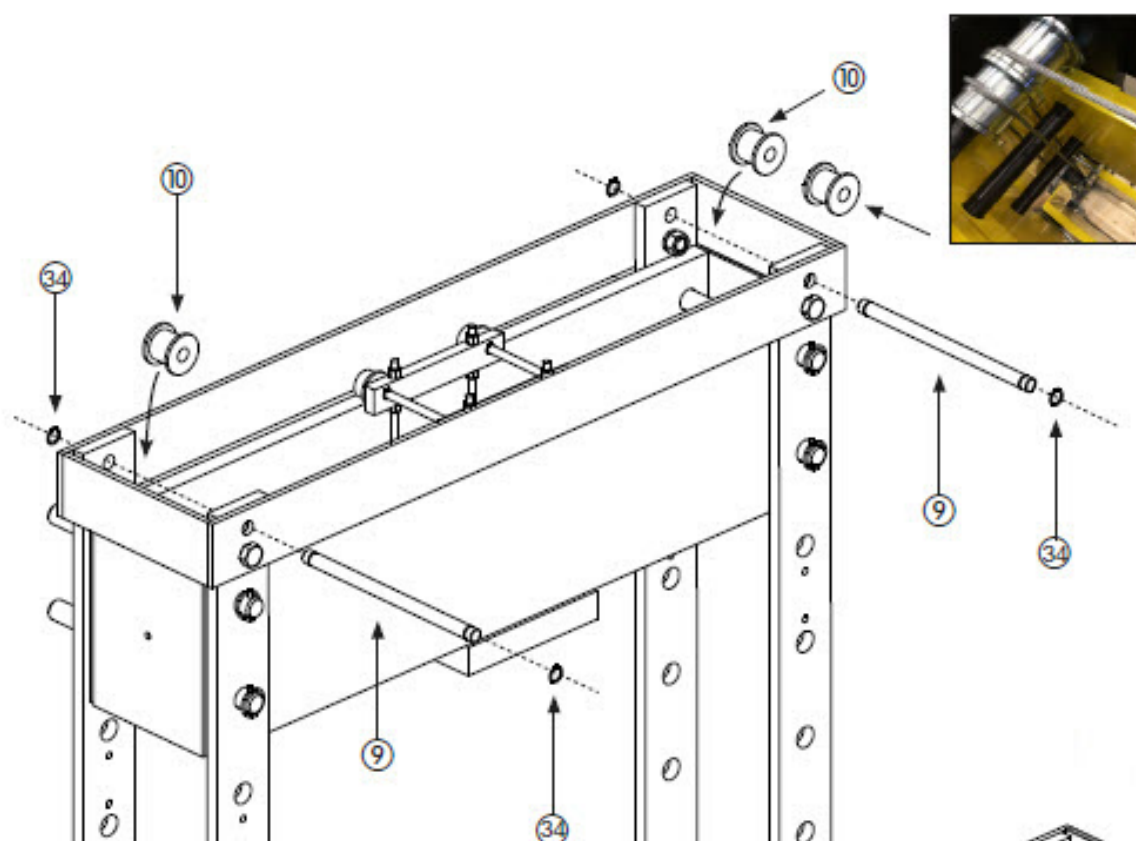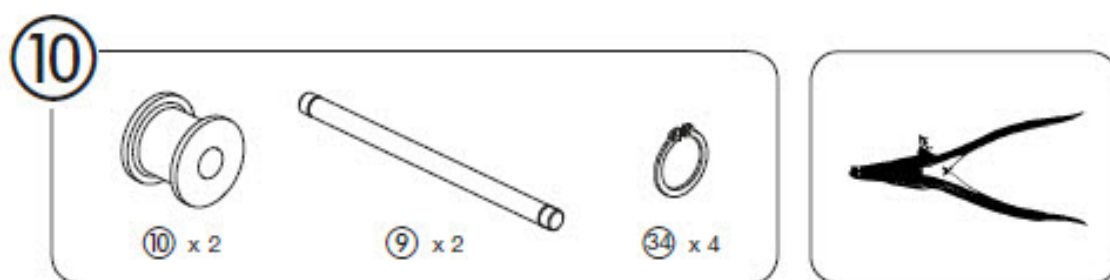

11



28 x 2




29 x 2











25 x 2



2 x 13 mm

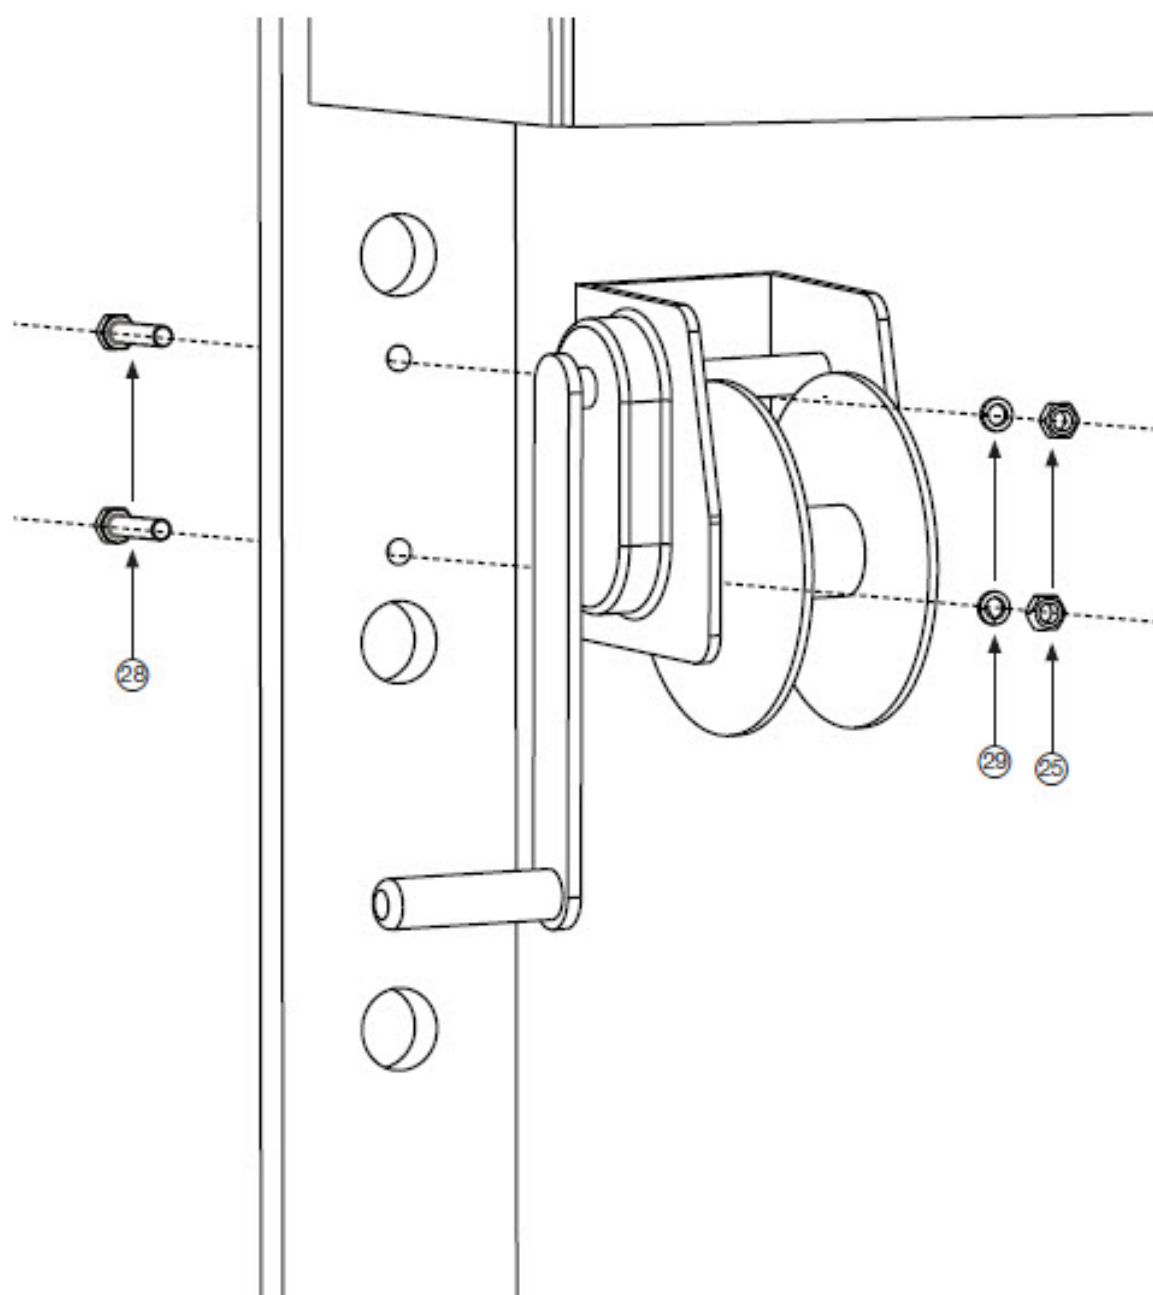

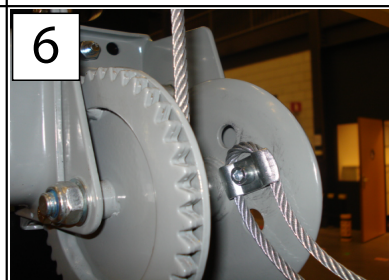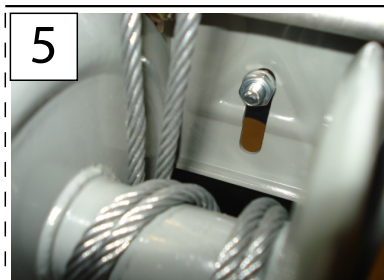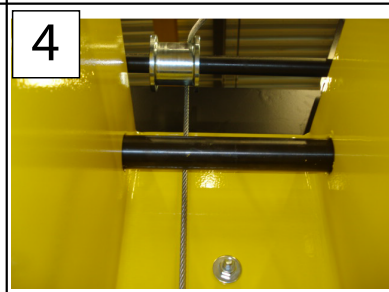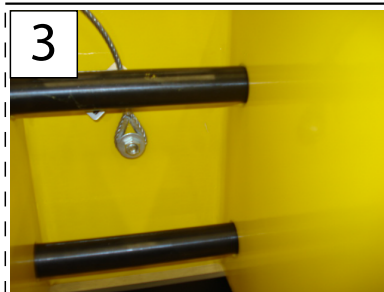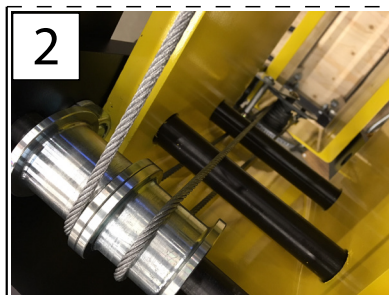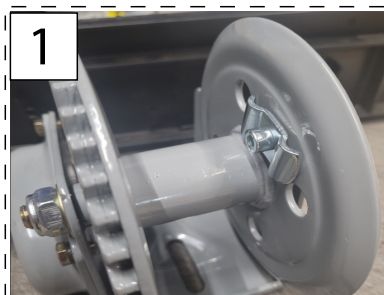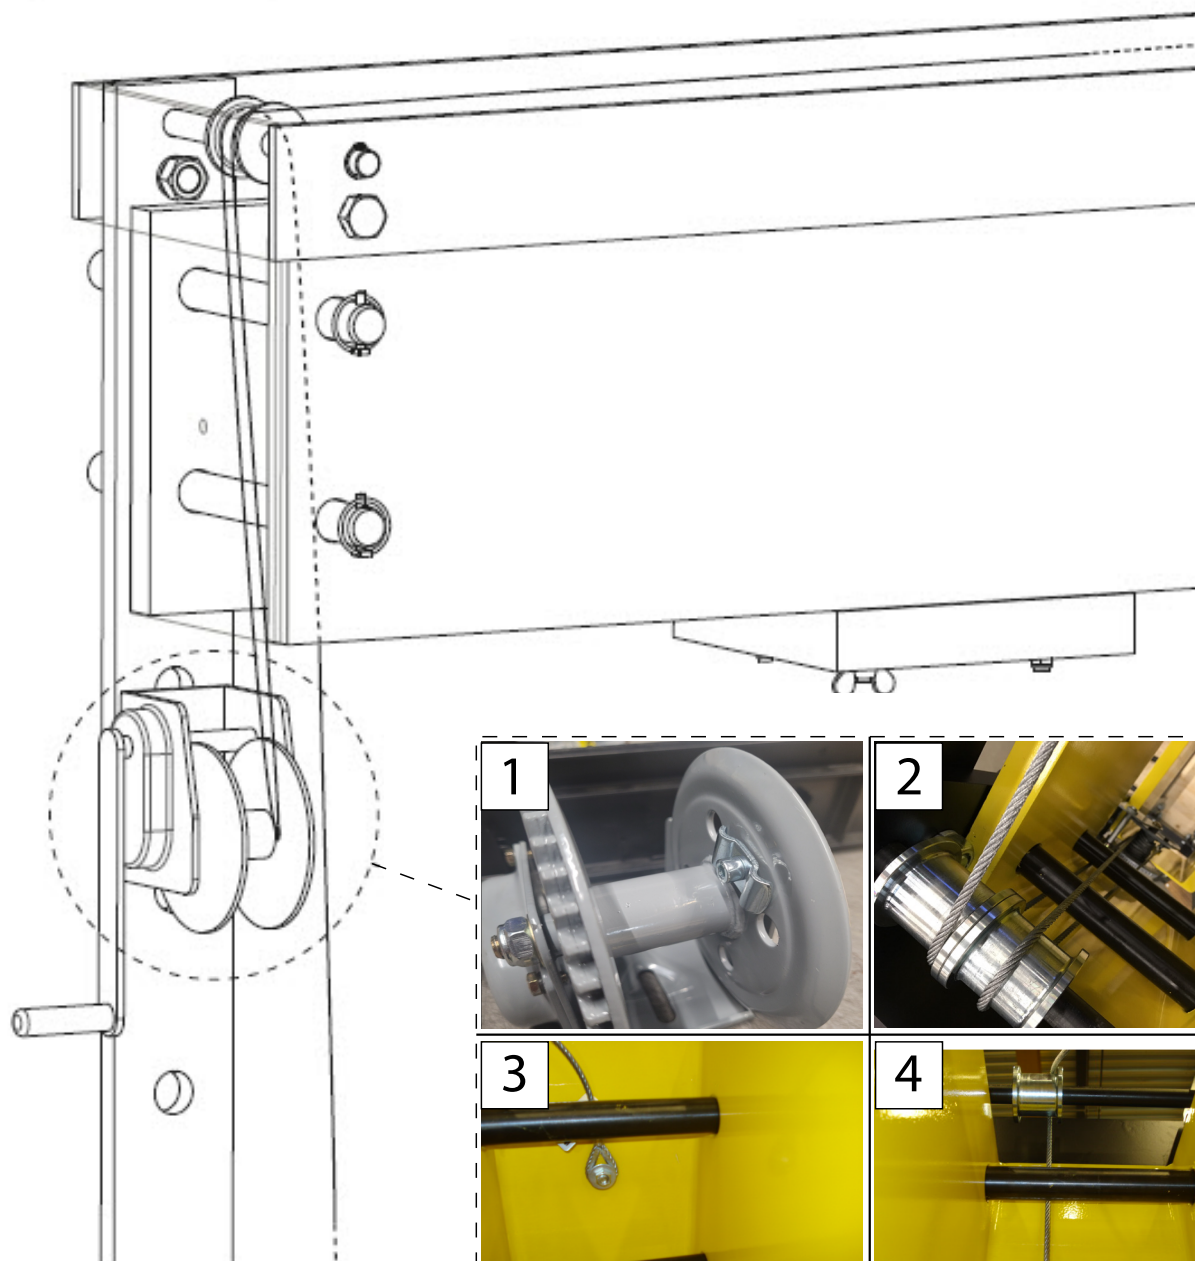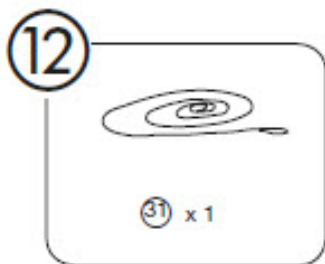

13



24 x 4




26 x 4




27 x 4



25 x 4

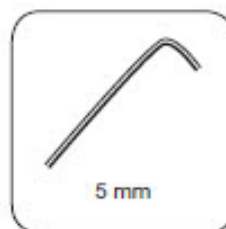

2 x 8 mm
2 x 13 mm

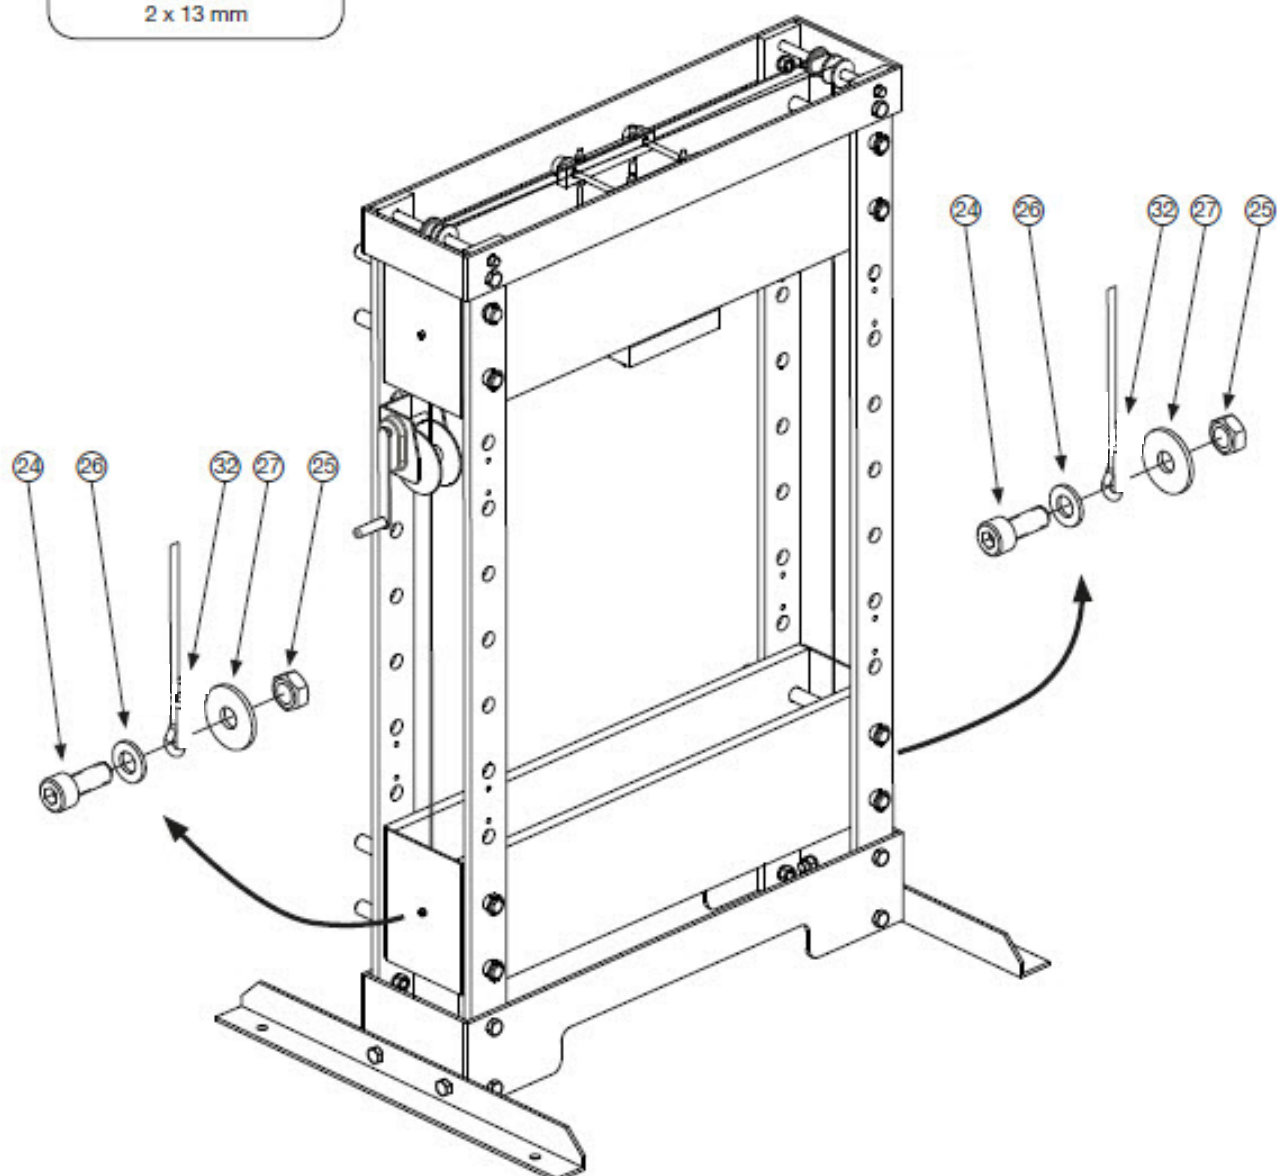

14

ENERPAC



RATED CAPACITY
75 TONS

RATED CAPACITY
50 TONS



XLP Series

(40) x 2



(41) x 1

(42) x 2

(43) x 2

(44) x 2

(45) x 2

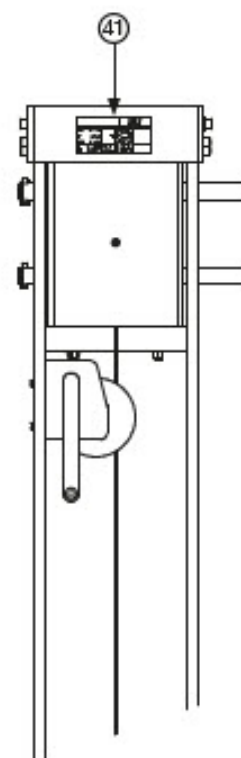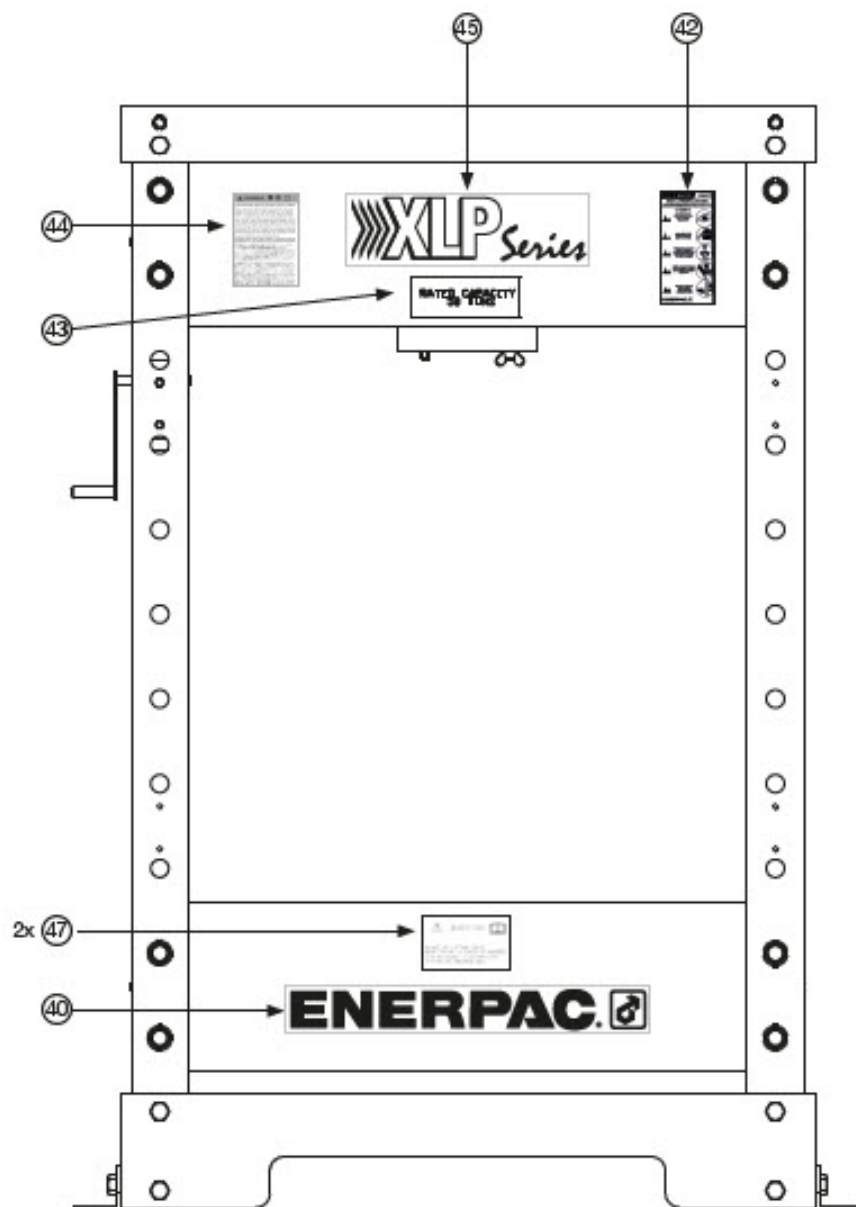

5.2 Mounting the Press Frame

⚠ WARNING Mount the press securely. Unstable positioning may cause the press to tip, resulting in serious personal injury or equipment damage.

If the press is to be mounted to the floor or some other foundation, lower press bed to lowest set of holes before drilling and bolting down. This will ensure that the press does not twist and that the bed will line up with all sets of holes in the legs.

5.3 Mounting the Cable Winch

To install the cable winch in the press, refer to the pictures of pages 21 and 22 and follow next instructions:

1. Attach the winch to the left side of the press frame with the bolts and nuts included with the press (page 21).
2. Install the cable holding bolt with the holding plate and nut (step 1, page 22). It must not be fully tighten, in order to subsequently attach the cable below the support plate. It has to be tighten only until it fixes to the winch.
3. Cable has to be placed over the top rolls (step 2, page 22) and each cable end has to be fixed to the under bed (step 3, page 22).
4. The user has to align the cable so that each side of the press has the same cable distance (step 4, page 22).
5. Install the cable below the support plate of the winch (step 5, page 22) and attach the cable fully tightening the holding bolt (step 6, page 22).
6. Turn the winch lever until the cable becomes tight. Check if the assembly works well lifting and lowering the lower bed.

⚠ WARNING Before starting to lift the bolster, be sure that instructions shown in paragraph 6.7 are followed in order to correctly lift and lower the press bolster.

5.4 Hydraulic Cylinder Installation

⚠ CAUTION Check all hydraulic hoses to be sure that fittings and couplers are tight and leak free. Check hose positions to be sure the hoses are located to avoid damage during press operations. Tighten all connections fully, but not excessively.

5.4.1 Single Acting Cylinder

1. Models with hand pumps
 - a. Connect the gauge adaptor (GA2) to the outlet port of the pump.
 - b. Attach the gauge into the ½" NPTF port of the gauge adaptor (GA2).
 - c. Attach the swivel coupler (XSC1) into the 3/8" NPTF port of the gauge adaptor (GA2).
 - d. Connect the female coupler (CR400) to the swivel coupler (XSC1).
2. Models with air pumps
 - a. Connect the swivel coupler to the outlet port on the side of the pump.

- b. Connect the female coupler (CR400) to the outlet port of the swivel coupler.
3. Connect the hydraulic hose with the coupler end to the pump.
 4. Add the street elbow (FZ1616) to the hydraulic hose.
 5. Add the female coupler (CR400) to the street elbow (FZ1616).
 6. Connect the hydraulic hose to the coupler on the cylinder.

5.3.2 Double-Acting Cylinders

1. Connect reducer (FZ1055) to the valve port "GA".
2. Connect street elbow (FZ1616) to reducer (FZ1055).
3. Connect reducer (FZ1634) to street elbow (FZ1616).
4. Connect gauge to reducer (FZ1634).
5. Connect street elbows (FZ1616) to the valve port "A" and valve port "B". Then connect the female couplers (CR400) to the street elbows.
6. Extend hose
 - a. Connect the hydraulic hose with the coupler end to valve port "A". Some models may require connecting male coupler (CH604) to the hose.
 - b. Add the street elbow (FZ1616) to the hydraulic hose.
 - c. Add the female coupler (CR400) to the street elbow (FZ1616).
 - d. Connect the hydraulic hose to the coupler on the cylinder nearest the base end.
7. Retract hose
 - a. Connect the hydraulic hose with the coupler end to valve port "B". Some models may require connecting male coupler (CH604) to the hose.
 - b. Add the street elbow (FZ1616) to the hydraulic hose.
 - c. Add the female coupler (CR400) to the street elbow (FZ1616).
 - d. Connect the hydraulic hose to the coupler on the cylinder nearest the plunger end.

Notes:

- Threaded NPT and NPTF connections: Apply PTFE tape to male threads and tighten each item to 1.5 to 3 turns past finger tight (minimum of 40 ft-lbs [54.2 Nm]).
- Pressure gauge and adapter: Orient as desired by first torquing to this minimum torque specification and then continuing to tighten until desired orientation is achieved.
- Tighten cylinder coupler halves by hand only. Be certain they are fully tightened (no gap or threads visible between coupler halves).

6. Operation

6.1 System Set-Up

⚠ WARNING Check all press set-ups and load fixtures for safe operation.

Center the work piece and all parts of the set-up on the line of force. If spacers are used in the set-up, they should be constructed in one solid piece or tack welded together for stability.

⚠ WARNING Before operating the press, make sure all bed support pins are fully inserted and retaining rings are installed on ends of the bolster pins before pressurizing the cylinder or loading the press.

6.2 Removing Air From The Hydraulic System

NOTICE Air removal will go faster if hose(s) are bled of air before connecting them to cylinder port(s).

Advance and retract the cylinder several times, avoiding pressure build-up. Air is fully removed from the system when the cylinder advances and retracts smoothly.

6.3 Hand Pumps

1. Close release valve finger tight.
2. Operate the pump handle to build pressure. Pressure will be maintained until the release valve is opened
3. Open release valve to release pressure.

6.4 Air Powered Pumps

Depress the pressure side of the treadle to activate the throttle and advance the cylinder to desired stroke. To retract the cylinder depress release.

6.5 Power Pumps

6.5.1 Manual Valve VE43 Without Pendant

1. To advance the cylinder, shift valve to the advance position and run the pump.
2. Shift valve to neutral when desired stroke is reached.
3. To retract the cylinder, shift valve to the retract position and run the pump.

6.5.2 Solenoid Valve VE33 With Pendant

1. Push and press the Arrow Up button to extend the cylinder. The cylinder moves downwards while the Arrow Up button is pressed.
2. Push and press the Arrow Down button to retract the cylinder. The cylinder moves upwards while the Arrow Down button is pressed.
3. If the Arrow Up or Arrow Down button is released, the cylinder stops moving.

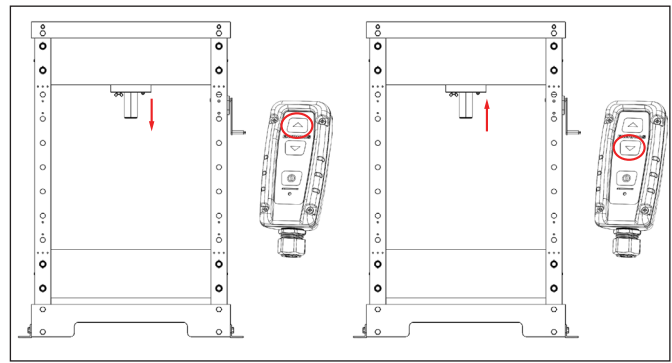


Figure 1: Pendant operation

6.6 Repositioning the Cylinder

1. Loosen, DO NOT REMOVE , the wing nut (D) located under the lower cylinder support bracket
2. Slide the cylinder mounting block assembly (A) to the desired position on the press frame
3. Tighten wing nut (D) securely when cylinder is in the desired location

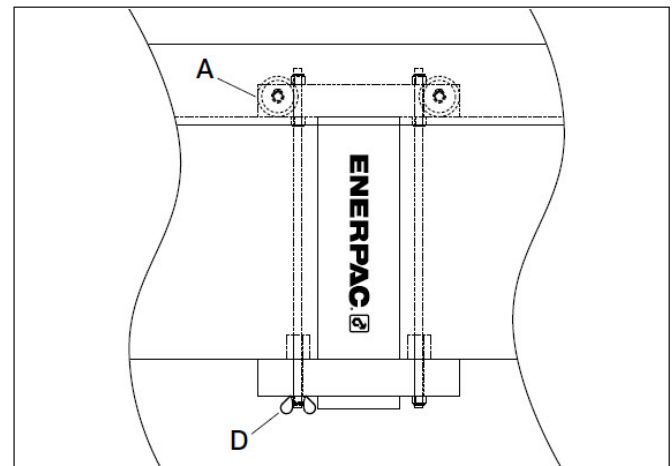


Figure 2: Repositioning the cylinder

6.7 Bed Adjustment (Raising and Lowering)

⚠ WARNING Remove all items from the press bed/bolster before raising or lowering bed/bolster.

⚠ WARNING Keep hands away from the press bed/bolster and frame when raising/lowering bed/bolster.

1. The winch has a self-locking feature and can be stopped in any position.
2. Remove retaining pins from the bed/bolster pins.
3. Turn the winch to raise the bed/bolster until the bed/ bolster pins become loose and can be removed from the press.
4. The bed/bolster can be raised/lower to the desired height.
5. When desired height is reached, install the 4 bed/ bolster pins back into the press and reinstall the retaining pins.
6. Slowly turn the winch so the bed/bolster moves down and sits on the pins.

⚠ WARNING Before operating the press, make sure all bed/ bolster support pins are fully inserted, retaining pins are installed and the bed/bolster is sitting on the bed/bolster support pins.

⚠ WARNING The bed/bolster support pins must be installed before operating the press. The winch cable is only used to raise/lower the bed/bolster, it is not designed to support the bed/bolster while pressurizing the cylinder or loading the press.

7. Storage

7.1 Recommended Storage

Enerpac tools should be stored in a cool, dry place. Tools should always be cleaned, serviced and lubricated prior to storage. Ensure that tools are stored in their designated packing cases.

8. Maintenance

8.1 Hydraulic System

1. Keep all hydraulic components free of dirt, grease, chips, and unnecessary equipment
2. Periodically check hydraulic system for damaged components, loose connections, or leaks. Replace or repair damaged or leaking components immediately
3. Change hydraulic oil in your system every 50 hours of operation
4. Use only Enerpac hydraulic oil. Use of fluids other than Enerpac hydraulic oil may cause damage to your system and may void your Enerpac warranty
5. For complete hydraulic component instructions, refer to the instructions enclosed with your pump and cylinder.

8.2 Press Frame

1. Keep work area and press bed free of dirt, chips, and unnecessary tools and fixtures
2. Periodically check press frame to make sure all bolts are tight and frame parts are undamaged. Replace or repair damaged parts immediately
3. If the paint becomes badly chipped, the unit should be repainted to prevent rusting and to keep frame appearance neat.




9. Troubleshooting

The information in the Troubleshooting Guide is intended as an aid to help diagnose and correct various possible problems that may occur. For repair service, contact your nearest Enerpac Authorized Service Center.

Troubleshooting Guide		
Problem	Possible Cause	Action
Cylinder plunger does not advance, advances slowly or in spurts.	1. Oil level in pump is low	1. 1. Add oil according to the pump instructions
	2. Pump release valve open	2. Close pump release valve
	3. Loose hydraulic coupler	3. Check that all couplers are fully tightened
	4. Load is too heavy	4. Do not attempt to exert more than rated tonnage
	5. Air trapped in the system	5. Remove air according to the instructions section 6.2
	6. Cylinder plunger binding.	6. Check for damage to cylinder. Have cylinder serviced by a qualified hydraulic technician.
Cylinder advances, but does not hold pressure.	1. Leaking connection	1. Check that all connections are tight and leak free
	2. Leaking cylinder seals	2. Locate leak(s) and have equipment serviced by a qualified hydraulic technician
	3. Internal leakage in pump.	3. Have pump serviced by a qualified hydraulic technician.
Single-acting systems:		
Cylinder does not retract, retracts part way or retracts more slowly than normal.	1. Release valve closed	1. Open pump release valve
	2. Cylinder retraction spring broken or other cylinder damage	2. Have cylinder serviced by a qualified hydraulic technician
	3. Cylinder attachments are too heavy for a single-acting cylinder	3. Use a double-acting cylinder to check that all coupler are fully tightened.
	4. Coupler not connected fully.	

10. Parts List

10.1 Exploded View, XLP-Series 50 and 75 ton

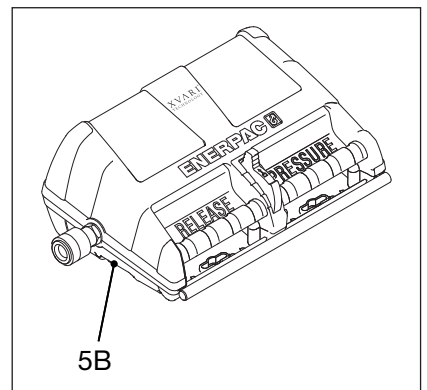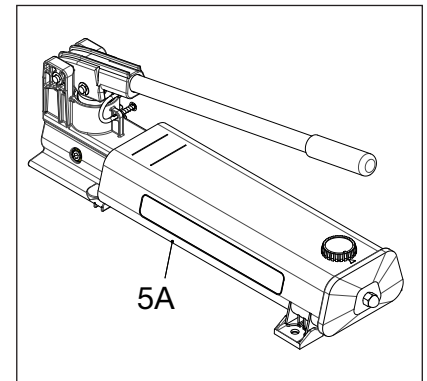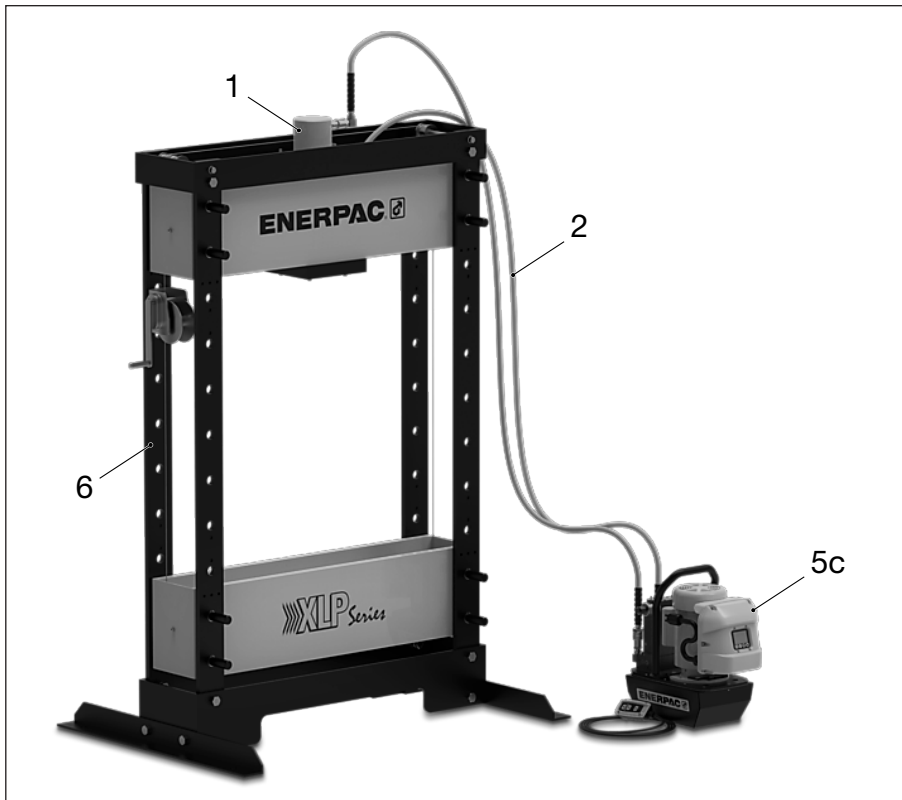

10.2 Parts Table, XLP-Series 50 and 75 ton (Refer to diagram in Section 10.1)

Item	Description	Qty.	Part Numbers			
			XLP506P802	XLP506P802U	XLP506XA12G	XLP506XA12GU
1	Cylinder	1	RC506	RC506	RC506	RC506
2	Hose, Hydraulic	1	HC7210	HC7210	HC7210	HC7210
3	Gauge, Pressure*	1	GF50B	GF50P	---	---
4	Adapter, Gauge*	1	GA2, XSC1	GA2, XSC1	---	---
5A	Hyd. Pump, Hand Operated	1	P802	P802	---	---
5B	Hyd. Pump, Air Operated	1	---	---	XA12G	XA12G
5C	Hyd. Pump, Electric Operated	1	---	---	---	---
6	Frame	1	DD1521900	DD1521900	DD1521900	DD1521900
7	Decal, Product Type*	2	▲	▲	▲	▲
8	Decal, Caution Warning*	2	▲	▲	▲	▲
9	Decal, Capacity*	2	▲	▲	▲	▲
10	Decal, Enerpac*	2	▲	▲	▲	▲
11	Decal, Caution*	2	▲	▲	▲	▲
12	Decal, Warning Hydrajust*	2	▲	▲	▲	▲
---	Enerpac V-Block Kit*	-	VB501 ■	VB501 ■	VB501 ■	VB501 ■
Product Date Code			A	A	A	A

▲ Indicates items included and available only as part of Label Kit, XLP50LK * not shown

■ Optional accessory. Two V-blocks are included in each Kit. Order as required

Item	Description	Qty.	Part Numbers			
			XLP506ZES	XLP5013ZES	XLP5013ZEBU	XLP5013ZEIU
1	Cylinder	1	RR506	RR5013	RR5013	RR5013
1a	Roller Cable Guide*	1	---	DQ2160281	---	---
2	Hose, Hydraulic	2	HC7210E104	HC7210E104	HC7210	HC7210
3	Gauge, Pressure*	1	GF50B	GF50B	GF50P	GF50P
4	Adapter, Gauge*	1	FZ1055, FZ1616 & FZ1634	FZ1055, FZ1616 & FZ1634	FZ1055, FZ1616 & FZ1634	FZ1055, FZ1616 & FZ1634
5A	Hyd. Pump, Hand Operated	1	---	---	---	---
5B	Hyd. Pump, Air Operated	1	---	---	---	---
5C	Hyd. Pump, Electric Operated	1	ZE4410SEE050	ZE4410SEE050	ZE4408SB	ZE4408SI
6	Frame	1	DD1521900	DD1521900	DD1521900	DD1521900
7	Decal, Product Type*	2	▲	▲	▲	▲
8	Decal, Caution Warning*	2	▲	▲	▲	▲
9	Decal, Capacity*	2	▲	▲	▲	▲
10	Decal, Enerpac*	2	▲	▲	▲	▲
11	Decal, Caution*	2	▲	▲	▲	▲
12	Decal, Warning Hydrajust*	2	▲	▲	▲	▲
---	Enerpac V-Block Kit*	-	VB501 ■	VB501 ■	VB501 ■	VB501 ■
Product Date Code			A	B	A	A
▲ Indicates items included and available only as part of Label Kit, XLP50LK * not shown ■ Optional accessory. Two V-blocks are included in each Kit. Order as required						

Item	Description	Qty.	Part Numbers	
			XLP756XA12G	XLP756XA12GU
1	Cylinder	1	RC756	RC756
2	Hose, Hydraulic	1	HC7210	HC7210
5B	Hyd. Pump, Air Operated	1	XA12G	XA12G
6	Frame	1	DD1565900	DD1565900
7	Decal, Product Type*	2	▲	▲
8	Decal, Caution Warning*	2	▲	▲
9	Decal, Capacity*	2	▲	▲
10	Decal, Enerpac*	2	▲	▲
11	Decal, Caution*	2	▲	▲
12	Decal, Warning Hydrajust*	2	▲	▲
---	Enerpac V-Block Kit*	-	VB101 ■	VB101 ■
Product Date Code			A	A
▲ Indicates items included and available only as part of Label Kit, XLP75LK * not shown ■ Optional accessory. Two V-blocks are included in each Kit. Order as required				

NOTES

[illegible]

