
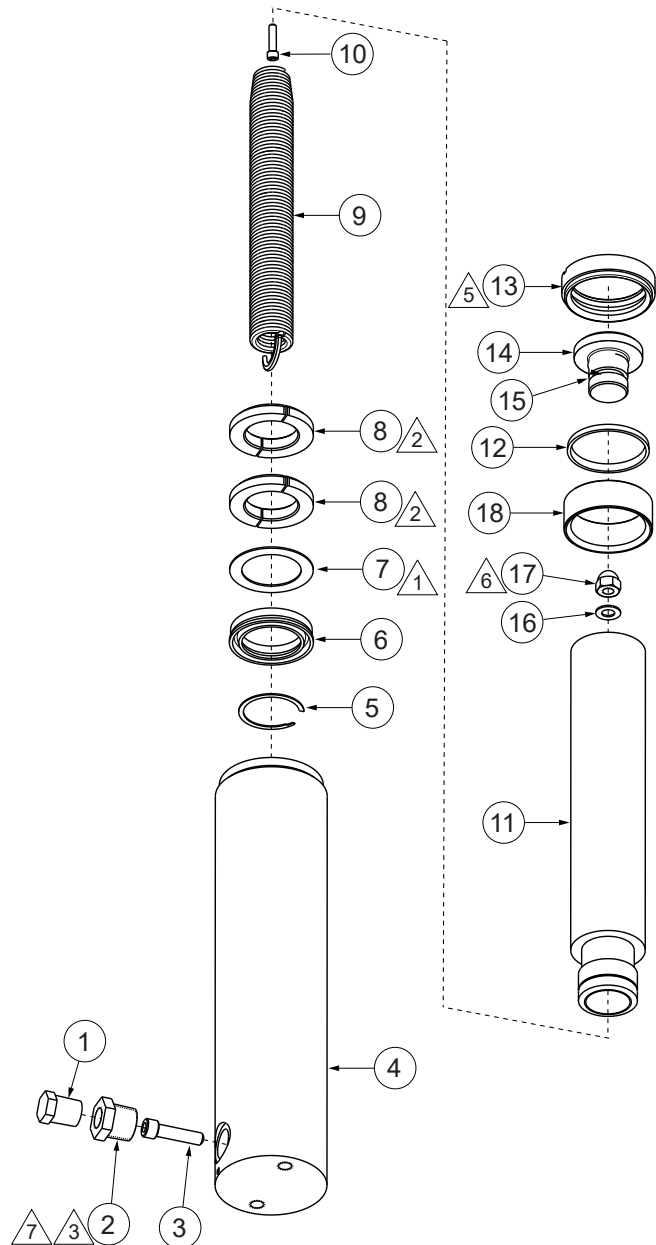


| Repair Parts Sheet | Revision | Revision Date | Product Date Code |
|--------------------|----------|---------------|-------------------|
| L4767              | B        | 01/2026       | D                 |

### BRW106 & BRW1010

### BRW101, BRW102 & BRW104

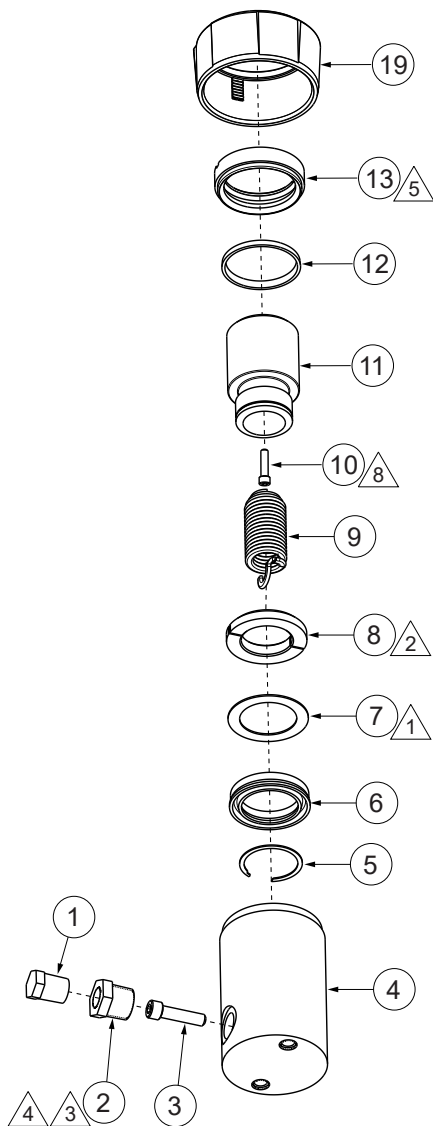

#### NOTES:

- ① WASHER TO BE ORIENTED WITH RADIUS OR CHAMFERED EDGE TOWARD BEARING AND SHARP EDGE TOWARD U-CUP
- ② ROD BEARING TO BE ASSEMBLED WITH SPLITS STAGGERED 90° APART.
- ③ USE LOCTITE 545 OR TEFLON TAPE
- ④ TORQUE TO 40-60 FT.-LBS. [54-81,3 NM]
- ⑤ SECURE WITH LOCTITE 222 AND TORQUE TO 70-90 IN-LBS [7.9-10.2 N-m]
- ⑥ TORQUE TO 8-10 FT-LBS. [10,8-13,5 N-m]
- ⑦ TORQUE TO 50-60 FT.-LBS. [67,6-81,1 NM]
- ⑧ TORQUE TO 4-5 FT.LBS. [5,4-6,8 N-m]

### Repair Parts List, Figure 1

| Item | Description      | Qty | Part Number |           |          |          |          |
|------|------------------|-----|-------------|-----------|----------|----------|----------|
|      |                  |     | BRW101      | BRW102    | BRW104   | BRW106   | BRW1010  |
| 1    | Pipe plug        | 1   | A8069006    |           |          |          |          |
| 2    | Reducer bushing  | 1   | CJ657032    |           |          |          |          |
| 3    | SHCS Screw       | 1   | ▲           |           |          |          |          |
| 4    | Base             | 1   | N/A         |           |          |          |          |
| 5    | Retaining ring   | 1   | ▲           |           |          |          |          |
| 6    | U-cup            | 1   | ▲           |           |          |          |          |
| 7    | Washer           | 1   | ▲           |           |          |          |          |
| 8    | Bearing          | 1   | G382107     |           |          | N/A      |          |
|      |                  | 2   | N/A         |           |          | G382107  |          |
| 9    | Spring           | 1   | L202110     |           |          | F937110  |          |
| 10   | Screw            | 1   | ▲           |           |          |          |          |
| 11   | Plunger          | 1   | CV942040    | CV943040  | CV944040 | BSS6445D | BSS6446D |
| 12   | Wiper ring       | 1   | ▲           |           |          |          |          |
| 13   | Stop ring        | 1   | G385044     |           |          |          |          |
| 14   | Saddle           | 1   | N/A         | DC4813900 |          |          |          |
| 15   | O-ring, saddle   | 1   |             |           |          |          |          |
| 16   | Gasket           | 1   | N/A         |           |          | ▲        |          |
| 17   | Nut              | 1   | N/A         |           |          | ▲        |          |
| 18   | Sleeve           | 1   | N/A         |           |          | G831446  |          |
| 19   | Thread protector | 1   | ▲           |           |          | N/A      |          |
| N/S  | Enerpac decal    | 1   | ▲           |           |          |          |          |
| N/S  | Warning decal    | 1   | ▲           |           |          |          |          |

**Notes:**

▲ Indicated item included in and available as a part of the Repair Kit RC10K50



[www.enerpac.com](http://www.enerpac.com)